

Rev. Date	Rev.	Document No.	
Jul-26-2011	0.2	SEAG-006	
Seagull 5000i Handset Firmware Upgrade via BDU Procedure			


Revision	Date	Change description	Author	Remarks
0.1	Jun-29 -2011	Draft	Haorong	
0.2	Jul-26- 2011	Comment on 9b	Haorong	

Preparation Committee	Reviewer Committee
Haorong Zhu	E.M.L Ekanayake




Rev. Date	Rev.	Document No.
Jul-26-2011	0.2	SEAG-006
Seagull 5000i Handset Firmware Upgrade via BDU Procedure		
Seagull 5000i Handse	t Firmware Upgrade via	BDU Procedure

- 1) Power up the Seagull 5000i BDU without the handset plugged in.
- 2) Using a web browser (Internet Explorer, Firefox, etc), open the WebConsole via <a href="http://192.168.0.1">http://192.168.0.1</a>
- 3) The following screen will appear and prompt for username and password.

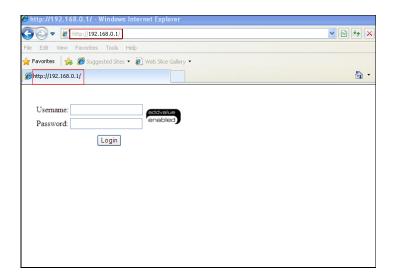

4) Fill in both fields and click Login to log on to the WebConsole. (Note: Username and Password will be admin by default.)

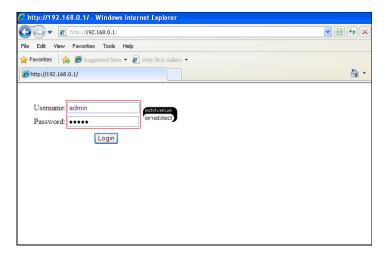




Rev. Date	Rev.	Document No.
Jul-26-2011	0.2	SEAG-006
Seagull 5000i Handset Firmware Upgrade via BDU Procedure		
Seagull 5000i Handse	t Firmware Upgrade via	BDU Procedure

## 5) In the main page,

a) Click the Settings icon as shown below.

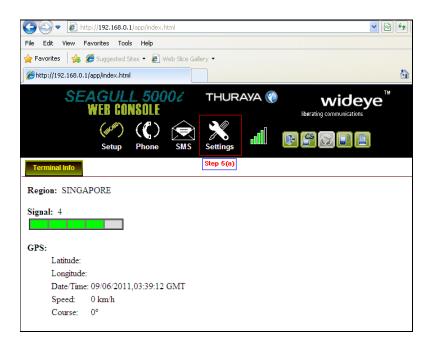

b) Click the Admin tab.





Rev. Date	Rev.	Document No.
Jul-26-2011	0.2	SEAG-006
Seagull 5000i Handset Firmware Upgrade via BDU Procedure		
∣ Seagull 5000i Ha	andset Firmware Up	grade via BDU Procedure

c) Click Firmware Upgrade tab on the left hand side as shown below.



d) The following screen will appear and click the Browse button.






Rev.	Document No.	
0.2	SEAG-006	
Seagull 5000i Handset Firmware Upgrade via BDU Procedure		
	0.2	

- 6) Browse the handset firmware (.bin) to be uploaded.

  Note: download the Handset firmware upgrade (ZIP file) and extract the .bin file to an accessible location on your PC prior to this step.
- 7) Then click the Upload button.
- 8) A small display window opens and shows Analyzing...

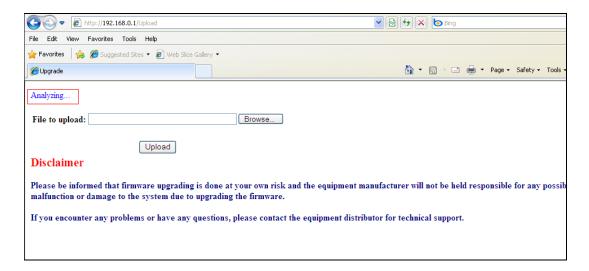

9) Plug in the Handset to the BDU while pressing the Mode Key.



Rev. Date	Rev.	Document No.
Jul-26-2011	0.2	SEAG-006

# Seagull 5000i Handset Firmware Upgrade via BDU Procedure



a) Release the Mode Key when the downloading starts.



b) When the downloading stage 1 of 3 is completed, the Handset will reboot automatically and the LCD screen will turn Blue.
 (For those units that do not support auto-reboot, user can unplug and re-plug in the handset manually to proceed with stage 2 and 3.)





Rev. Date <b>Jul-26-2011</b>	Rev. <b>0.2</b>	Document No. SEAG-006
Seagull 5000i Handset Firmware Upgrade via BDU Procedure		

 The Handset screen starts blinking blue and downloading stage 2 and 3 start.



10) The following screen will appear when the upgrading is completed. The handset will reboot automatically. After reboot, verify whether the correct firmware is updated. Done.

