



Thuraya MarineStar



Thuraya SatTrack

End User manual for Standard profile V2.0

Copyright & Trademarks all rights reserved.

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of FrontM Limited, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law. For permission requests, write to info@frontm.com, addressed "Attention: Permissions Coordinator," at the address below.



1. Introducing Thuraya SatTrack	5
2. Setup	5
2.1 Pre-requisites for End User portal access	6
2.2 Initial Setup	6
2.3 Link MarineStar to SatTrack	6
2.4 Program default tracking values for SatTrack compatibility	7
2.5 Start tracking	7
2.6 SatTrack initial setup	7
2.7 Deactivation of SatTrack service	9
2.8 Understanding the user roles	9
2.9 Login and User Accounts	10
2.10 SMS usage	10
3. Vessels - view and configuration	11
3.1 List of Vessels	11
3.1.1 Vessel List – Map View	11
3.1.2 Vessel List – Table	12
3.1.3 Viewing vessels on the Map	13
3.1.4 Filter and search	14
3.2 Vessel Information	15
3.2.1 Vessel Details	16
3.2.2 Tracking	18
3.2.2.1 Tracking Map & Table View	18
3.2.3 Configuration	21
3.2.3.1 Vessel Information	21
3.2.3.2 Tracking	22
3.2.3.3 Alert Types	23
3.2.3.4 SOS Settings	24
3.2.3.5 Fish Types	24
3.2.3.6 Fishing Gear	25
3.2.3.7 GPIO Control & Function	26
3.2.3.8 Captain Password	27
3.2.3.9 Request for Admin Password Change	27
3.2.3.9 Report Server Settings	27
3.2.4 Fish Catch Reports	28



3.2.5 Messages	29
3.2.6 Call Logs	30
3.2.7 Call Manager	31
3.2.7.1 Crew calling	31
3.2.7.2 Speed dial	32
3.2.7.3 Whitelist	33
3.2.7.4 Blacklist	34
3.2.8 Portal Tracking Areas	35
3.2.9 Radio Silence Areas	36
3.2.10 Restricted Zones	38
4. Map display options	39
5. Overlays	40
5.1 FAO	40
5.2 EEZ	41
5.3 Weather Overlay	42
5.4 Custom Overlay	42
6. My Information	43
7. Fleets & Regions	44
7.1 Fleets	44
7.1.1 Fleets List	44
7.1.2 Adding a new fleet	45
7.1.3 Edit a fleet	46
7.1.4 Delete a fleet	46
7.1.5 Send OTA	47
7.2 Regions	47
7.2.1 Regions List	47
7.2.2 Adding a new region	48
7.2.3 Edit a region	49
7.2.4 Delete a region	49
8. Profiles	50
8.1 Profiles List	50
8.2 Create new Profile	51
8.2 Edit Profile	52
8.3 Delete Profile	52
8.4 Copy Profile	52



8.5 Download Profile	52
9. Areas	53
9.1 Creating an Area file for import	53
9.2 Creating a new area	55
9.3 To import a csv file to create a tracking area	56
9.4 To draw an area on the map	56
10. Logs	58
11. Regional Offices	59
11.1 Creating Regional office file for import	60
11.2 Creating a Regional Office	62
11.3 To import a csv file to create a Regional Office	62
12. Admin	63
12.1 Admin Settings	63
12.1.2 Report Frequency	63
12.1.2 Metrics	63
12.1.3 Notifications	64
12.2 Create Users	64
12.2.1 Add New User	65
12.2.2 Edit User	65
12.2.3 Delete User	66
12.3 User Permissions	66
12.4 Search Users	67
13. Help (on portal)	69
14. Permissions	70



1. Introducing Thuraya SatTrack

Thuraya SatTrack is a software-based tracking system designed for Thuraya MarineStar. Thuraya SatTrack provides secure, private and accurate vessel tracking to support operations, voyage planning benefiting vessel owners and operators.

You, as a Thuraya Customer, can request Thuraya to provision a Thuraya SatTrack package for the Marinestar terminals used by your Company.

If this is the first time you are requesting a MSISDN setup for your company, you will receive a license key. This license key can be used to set up your account on the Thuraya SatTrack portal.

If you are an already existing user of the portal, you can login with your credentials.

Thuraya SatTrack software can be accessed at

<https://sattrack.thuraya.com>

The software will show you the latest reported location of all your vessels which are active, suspended or deactivated on a map. Thuraya SatTrack will also allow you to view trails for different durations, receive alerts when the vessel enters a certain area, download tracking history for vessels, view areas assigned to the vessel, view the weather information at the vessel location, view different types of maps and overlays and many other capabilities.

2. Setup

Thuraya SatTrack is automatically associated with one or more Thuraya SIMs at the time of purchase.

 
A software account will be set up for you and will provide you access to all your vessels.



2.1 Pre-requisites for End User portal access


1. SatTrack portal access
2. Steady internet access
3. Laptop/PC with latest web-browser
4. Ensure no firewall blocking <https://sattrack.thuraya.com/>
5. License key to create the Enduser account to access the Sattrack Portal
6. Active sim-card subscribed to SatTrack portal
7. Sim-card tray to be used which is provided in the MarineStar packaging [Thuraya Nano-sim fixed on the tray]
8. Terminal powered by a reliable power supply with specs: 24V/1.8A or 12V/3.6A
9. Clear line of sight with signal strength showing min. 4 bars and GPS location acquisition until the entire setup is completed without any interruptions [Refer to Thuraya MarineStar user manual]
10. Test call and SMS prior as a recommendation

2.2 Initial Setup

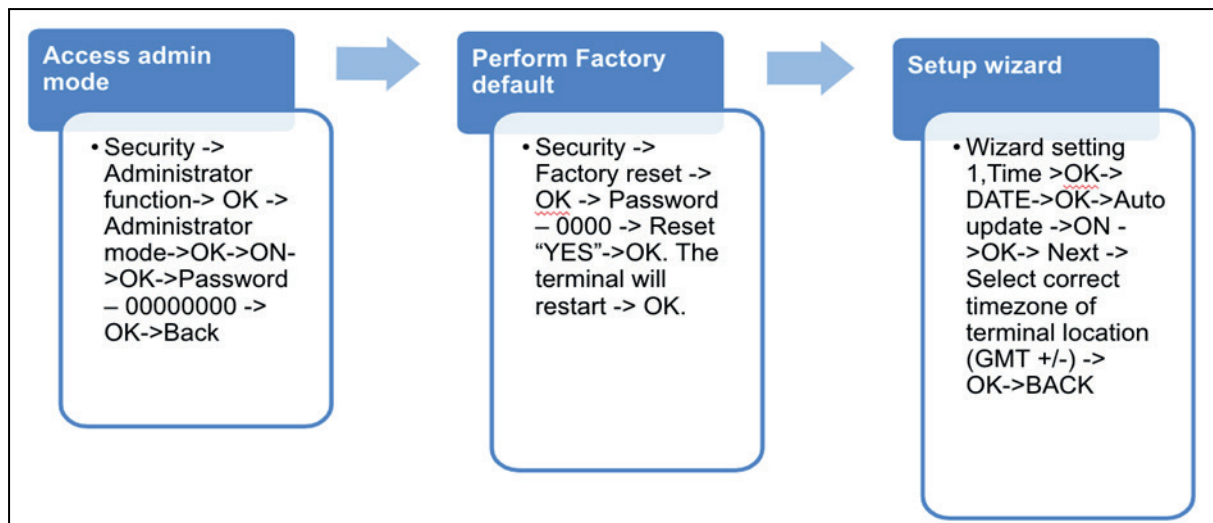





2.3 Link MarineStar to SatTrack

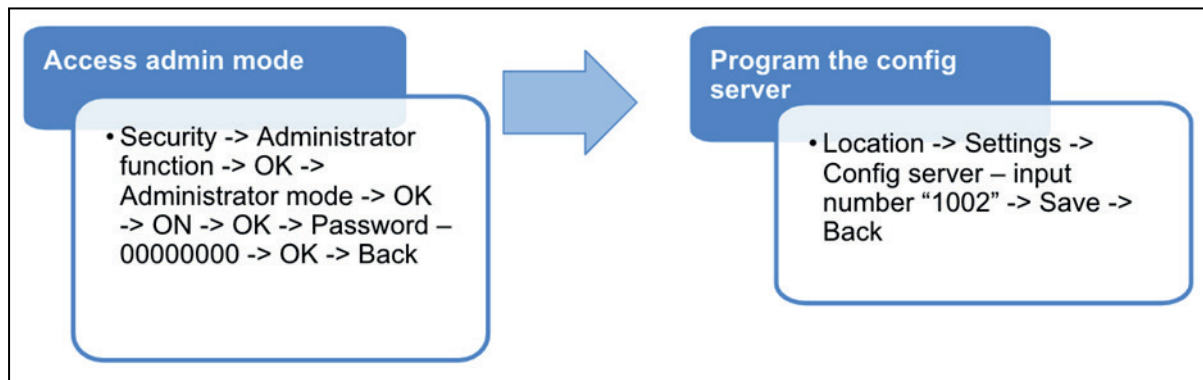

 2.4 Program default tracking values for SatTrack compatibility


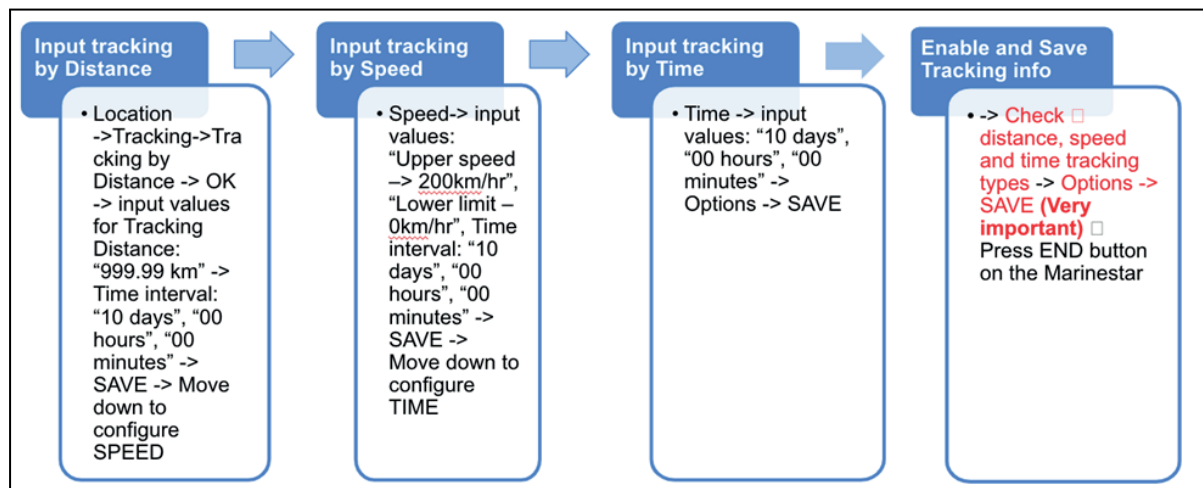


 2.5 Start tracking

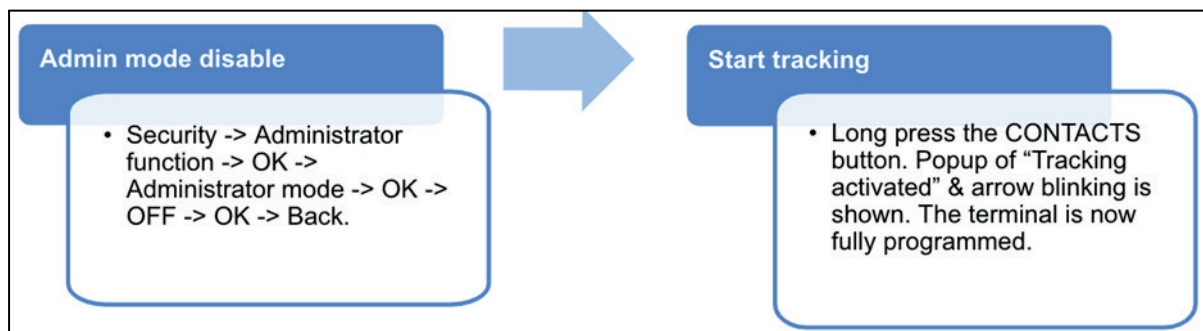



  
2.6 SatTrack initial setup

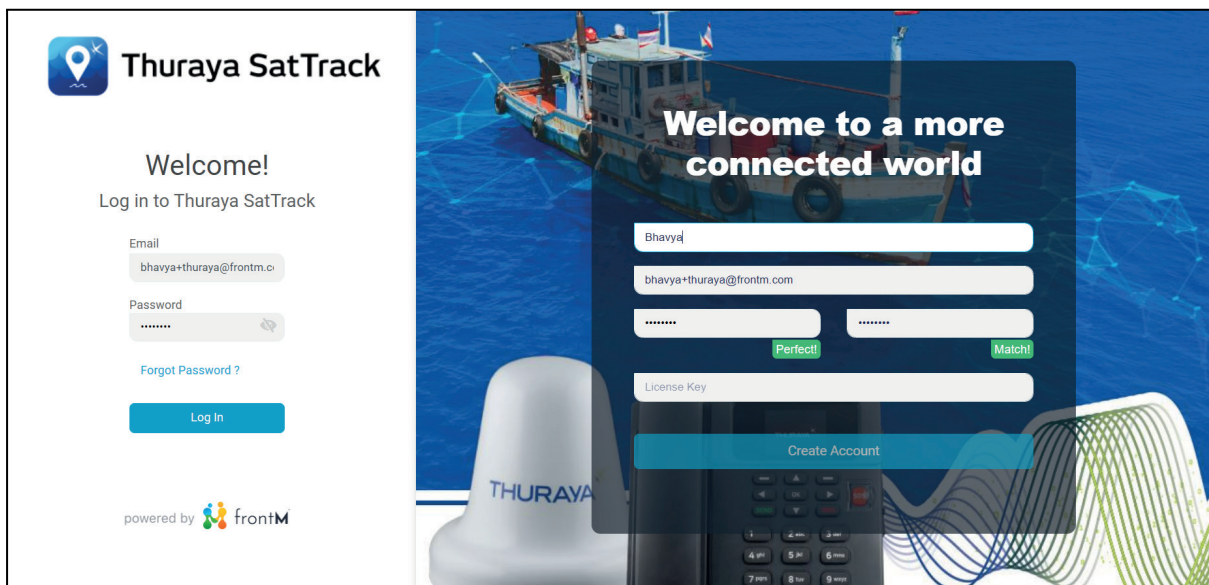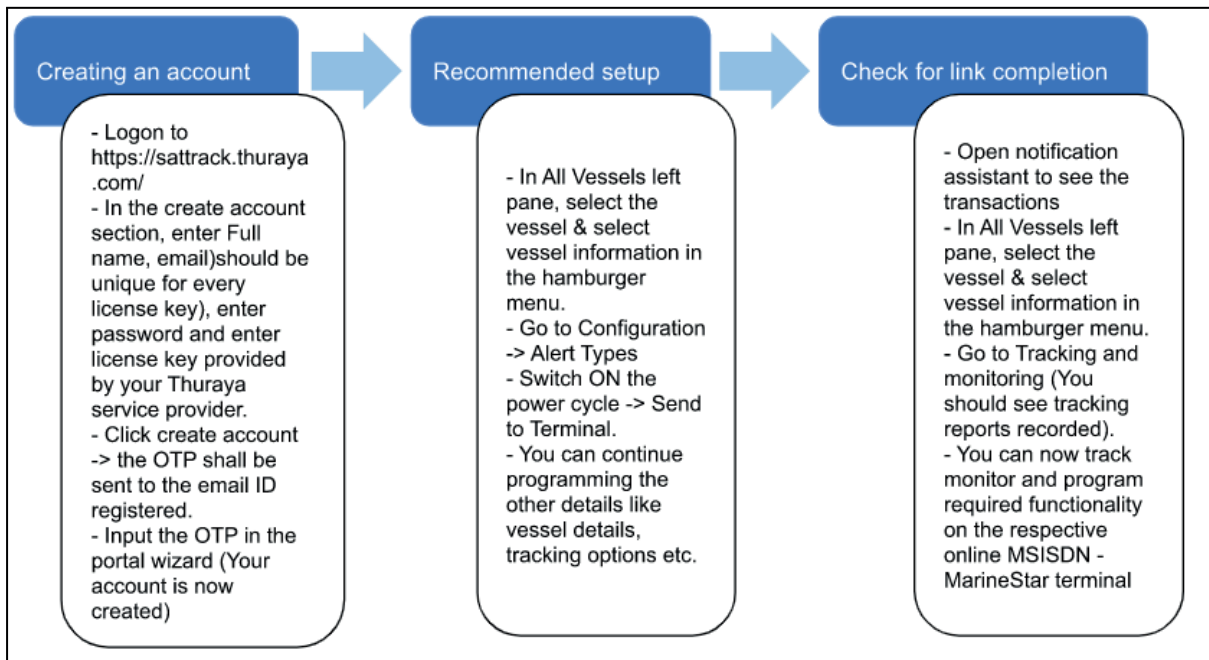

Important notes:

 1. Ensure you follow all the steps mentioned as pre-requisites in Section 2.1 of the End user manual.
2. Ensure you do not change the default remote server authentication pin (00000000) on the terminal




3. GNSS co-ordinate format DD.ddddd is the only format supported on the portal. Ensure that the terminal is set up to send location in this format.
4. The portal is set up for English language.
5. The time shown in the assistant  is the local PC time (the time zone on the end users PC).
6. The incoming, outgoing and missed calls are in the time zone that the terminal was in at the time of making the calls.
7. All other times are in GMT (indicated with a “GMT” tag in the column header)

2.7 Deactivation of SatTrack service

1. Request the admin password with your authorized service provider before deactivating the SatTrack service. Ensure the service and terminal is online while performing this activity.
2. Use the admin password to Factory reset the terminal.
3. Proceed with sattrack service deactivation with your service provider.
4. The deactivated MSISDN will be available on the portal for one(1) month from the date of deactivation.
5. The data of the deactivated MSISDN (transactional data and configuration) will be available upon request for one(1) year from the date of deactivation.



 
2.8 Understanding the user roles

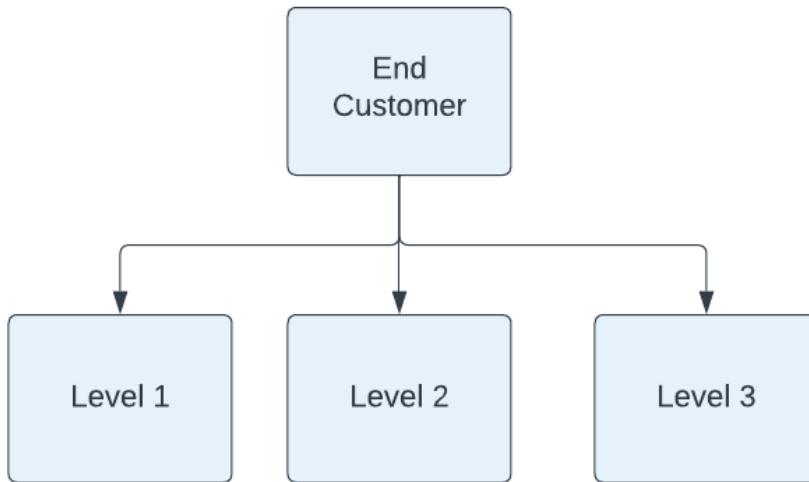

2.9 Login and User Accounts

You will be able to create an account on the Thuraya SatTrack portal using the license key provided by Thuraya.

 This will allow you to log in to the Thuraya SatTrack portal using the username (which will be an email ID) and the password chosen by you.

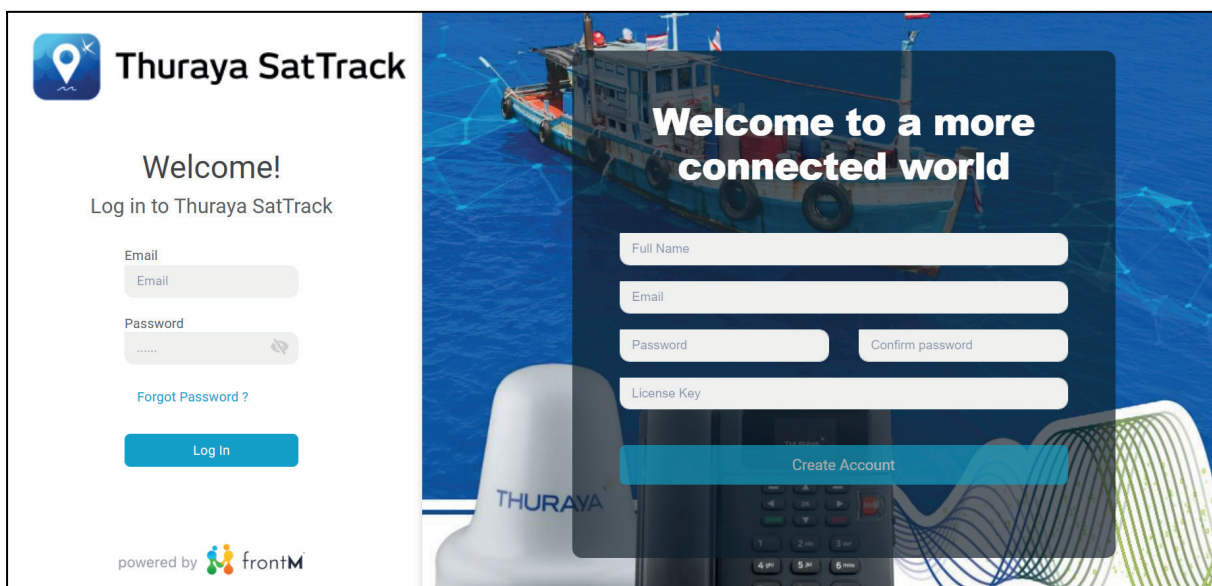



2.10 SMS usage

The Thuraya SatTrack software communicates with the terminal using Thuraya track and monitor plans.

 
The following types of messages will normally be deducted from your Thuraya track and monitor plans:

1. Responses sent by the terminal to the Thuraya SatTrack portal
eg: Reporting of tracking information, alerts, success/fail acknowledgment from the terminal for the configuration from the portal, etc

3. Vessels - view and configuration

3.1 List of Vessels

The Vessel list shows the vessels that the end user logged in has access to. Vessels are displayed in two views – Map view and table.

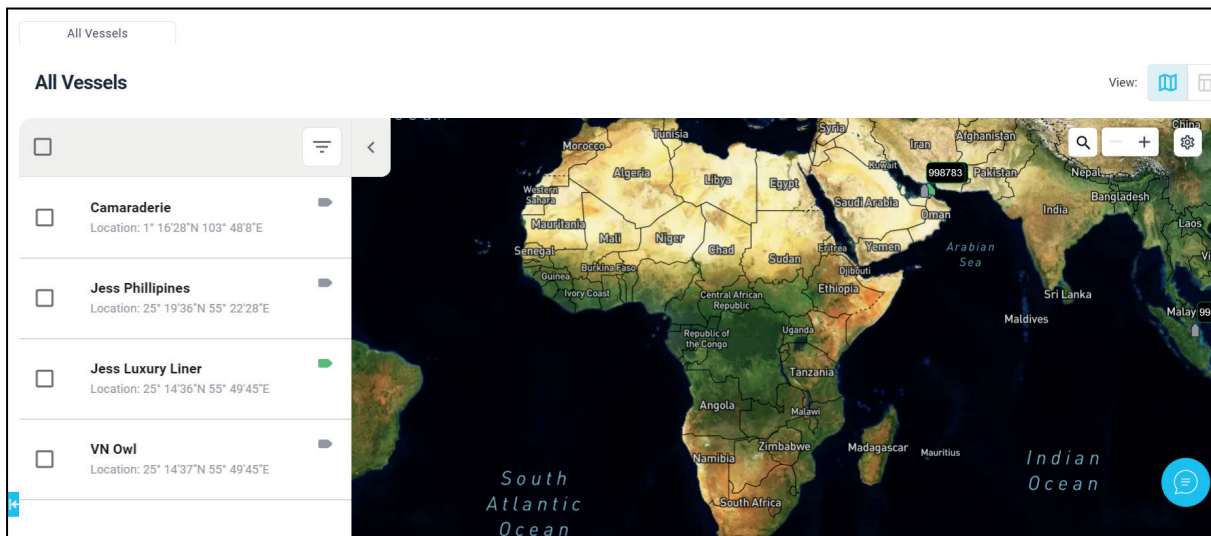

3.1.1 Vessel List – Map View


In the left pane of the Map View, when we click on the Vessel name, a pop up displays Vessel Name, Last known location & time, Course (in deg), Last reported SOS location & time, MSISDN, Status, IMEI, Firmware, Last event, Fleet, IMO, Registration number, Vessel Type details for each of the vessels.



Vessel Icons Colors and Status


 Unresponsive

 Good Vessel


 Bad Vessel

 SOS

 Deactivated

 Suspended

1. Unresponsive vessel - within the last 24 hours/ 1 day; if tracking is not getting reported by the terminal on 100% of instances; then can be considered as a unresponsive vessel
2. Good Vessel - within last 24 hours/ 1 day; if tracking is (i) on time and (ii) without any errors on 75%+ instances; then can be considered as a good vessel
3. Bad Vessel - within last 24 hours/ 1 day; if tracking is (i) not on time and (ii) having errors in 25%+ instances; then can be considered as a bad vessel
4. SOS: If vessel has sent SOS alert within last "4" hours; this vessel to qualify for SOS type
5. Deactivated - All the deactivated msisdns will have this vessel icon.
6. Suspended - All the suspended msisdns will have this vessel icon.

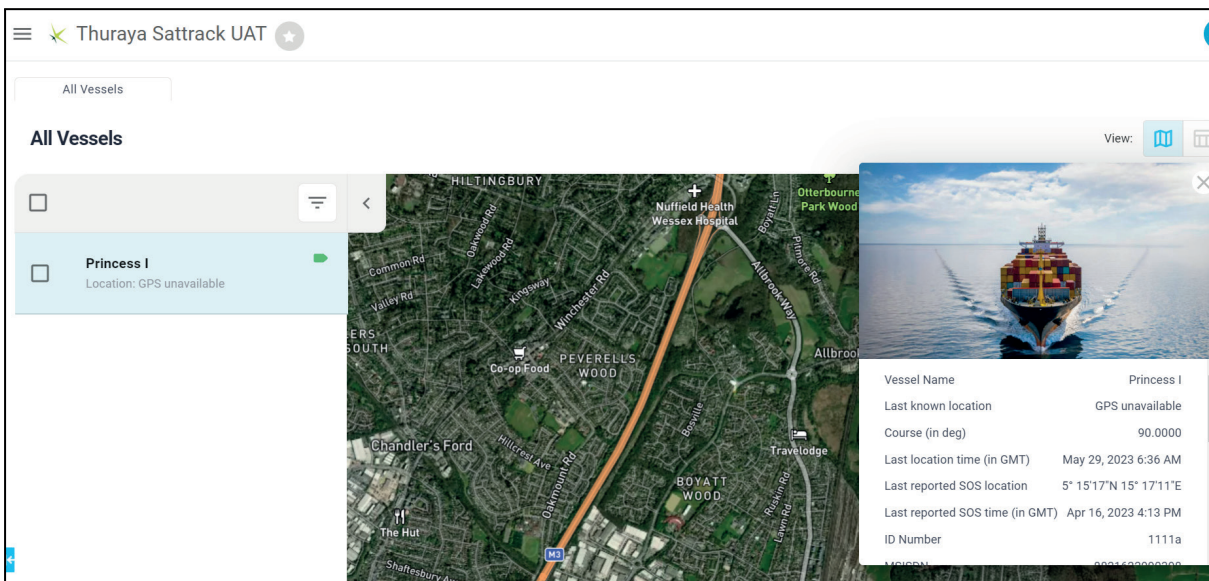




The screenshot displays the Thuraya Sattrack UAT interface. On the left, a sidebar shows a list of vessels under the heading 'All Vessels'. One vessel, 'Princess I', is highlighted with a green status indicator. The main area shows a satellite map of a residential area with a red line indicating a vessel's path. A detailed view of the vessel 'Princess I' is shown on the right, displaying the following information:

Vessel Name	Princess I
Last known location	GPS unavailable
Course (in deg)	90.0000
Last location time (in GMT)	May 29, 2023 6:36 AM
Last reported SOS location	5° 15'17"N 15° 17'11"E
Last reported SOS time (in GMT)	Apr 16, 2023 4:13 PM
ID Number	1111a



3.1.2 Vessel List – Table

Click on the table view button () to view vessel details in a table format - Vessel Name, Last known location & time, Course (in deg), ID Number, MSISDN, Status, IMEI, ADU S/N, BDU S/N, Firmware, Last event, Fleet, Region, IMO, Registration number, Vessel Type details for each of the vessels are displayed.


All Vessels View:  


×
☰

<input type="checkbox"/>	Vessel Name	Last Known Location	Course (In Deg)	Last Location Time (In GMT)	ID Number	MSISDN	Status	IMEI	ADU S/N	BDU S/N
<input type="checkbox"/>	Camaraderie	1° 16'28"N 103° 48'8"E	NA	Feb 23, 2023 8:14 AM		882162299 8785	ACTIVE	202302230 72547Z		
<input type="checkbox"/>	Jess Philippines	25° 19'36"N 55° 22'28"E	NA	May 20, 2023 6:18 PM		882162299 8783	ACTIVE	358876107 492424		
<input type="checkbox"/>	Jess Luxury Liner	25° 14'36"N 55° 49'45"E	137.8705	May 29, 2023 6:28 AM		882162299 8013	ACTIVE	358876104 215976		
<input type="checkbox"/>	VN Owl	25° 14'35"N 55° 49'45"E	180.9965	May 29, 2023 6:39 AM	1VID	882162299 8010	ACTIVE	358876104 219945		

Additionally, Vessel name, Registration number, IMO, Vessel Type, ADU S/N, BDU S/N and ID Number can also be configured from the Thuraya SatTrack portal. Please refer [3.2.1 Vessel Details](#) section on how to configure these.

 Selecting a checkbox next to any (one or more than one) vessel will

bring up the menu Icon () at the top of the table which in turn will have Vessel Information & Alert Event History options which allows you to navigate to the Vessel information and Alert events history tabs respectively.

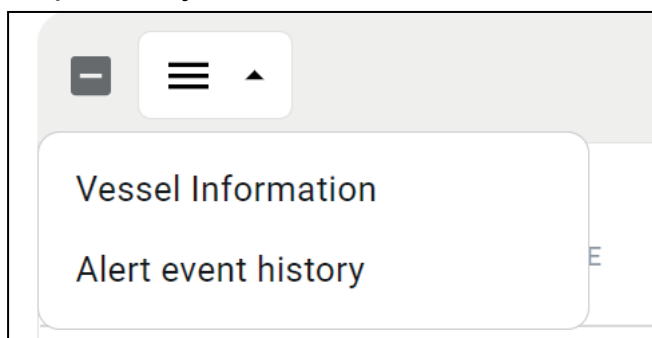 





3.1.3 Viewing vessels on the Map

To find a vessel on the map and zoom in on it, you can follow the below steps:

 Step 1: Expand the list of All Vessels. This opens the left pane which displays all the vessels associated with the End User.

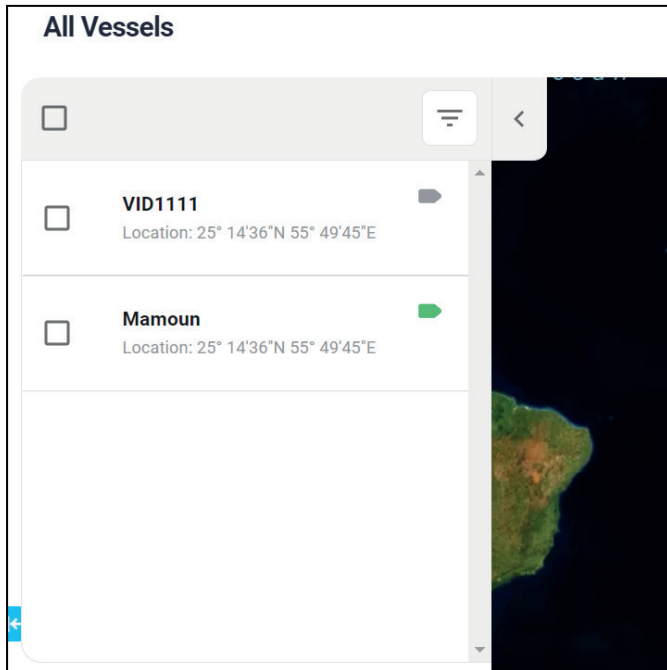


Step 2: Click on any of the vessels. The vessel location will be visible on the map.

Step 3: Click the vessel icon  on the map, vessel details are displayed in a pop up on the map.

3.1.4 Filter and search

 
We can also filter the Vessels by Vessel Name, Vessel Status, Vessel Type, Vessel MSISDN, Last Reported Event, Last Reported Event

Sub-Type, Vessel Behaviour, Fleet and Region using the filter  button.




Filtering of Vessels:

We can create our own filters by entering the Vessel Name, Vessel Status, Vessel Type, Vessel MSISDN, Last Reported Event, Last Reported Event Sub-Type, Vessel Behaviour, Fleet and Region details

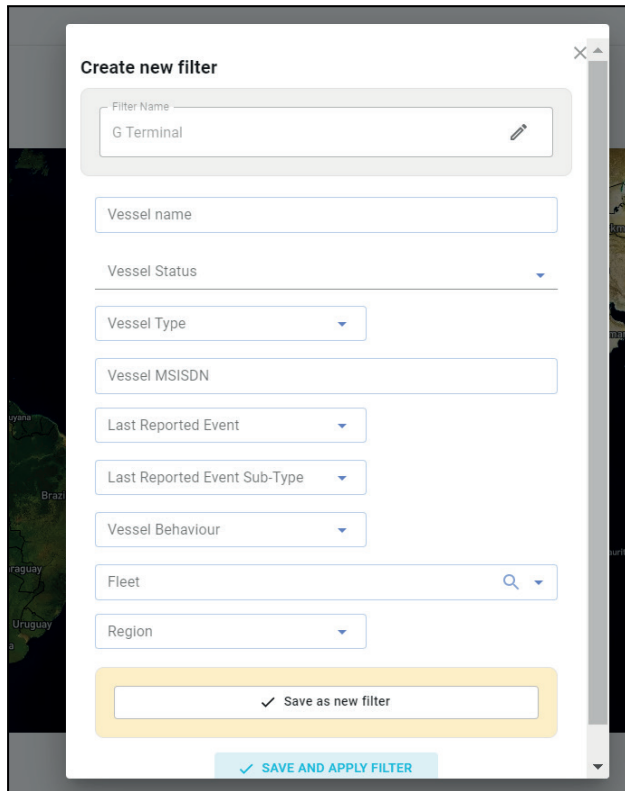

Search Vessels:

 We can search vessels by entering the Vessel Name, Vessel Status, Vessel Type, Vessel MSISDN, Fleet and Region details.

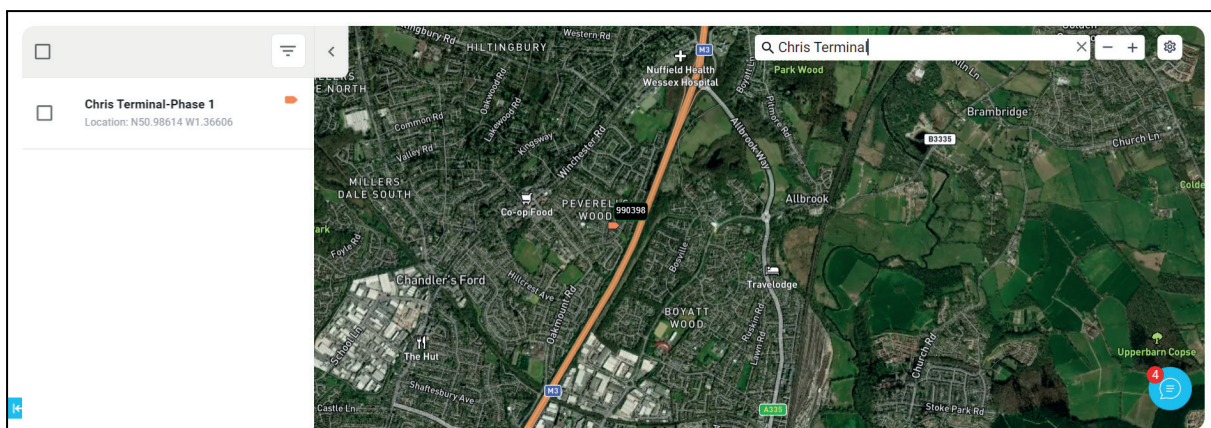



3.2 Vessel Information

This includes the options below. These are described in more detail in the following sections.

 
 
Please refer to the [3.1 List of Vessels](#) on how to navigate to the Vessel Information tab.

Important note:

Any configuration changes sent from the Thuraya SatTrack portal will overwrite the existing settings on the terminal.

To get an overview of the configurations available to the end user, please refer to the [14. Permissions](#).

Tips:


1. For every configuration setting sent to the terminal from the portal, the acknowledgement received from the terminal will be shown in the assistant  at the bottom right corner of the map.
2. The assistant can be opened and the notifications can be viewed by clicking on the  at the bottom right corner of the map area.
3. Before sending any new configuration setting, make sure that the acknowledgement for the previous setting was received.



3.2.1 Vessel Details

This function enables you to view and update Vessel image, Vessel name, Vessel ID, MSISDN, Subscription Status, Last Known Location & Time, IMEI, IMO, Registration Number, Fishing License, Length, Vessel Type, Fleet, Region, Contract ID, and profile.

^ Vessel

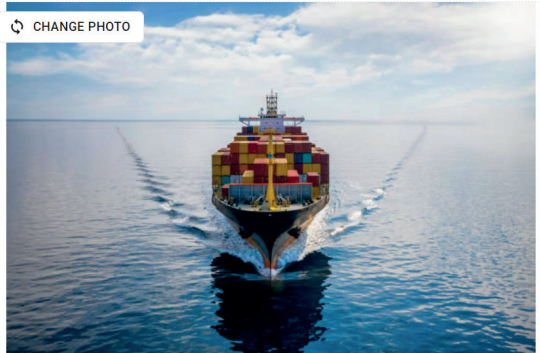

Upload an image close to a 4:3 aspect ratio for optimal viewing.

CHANGE PHOTO

SAVE VESSEL IMAGE

^ Vessel details

<p style="font-size: 8px; margin-bottom: 5px;">Vessel ID</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="1111a"/> <p style="font-size: 8px; margin-top: 5px;">max 10 chars</p>	<p style="font-size: 8px; margin-bottom: 5px;">Vessel name</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="Princess I"/> <p style="font-size: 8px; margin-top: 5px;">max 24 chars</p>
<p style="font-size: 8px; margin-bottom: 5px;">MSISDN</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="8821622990398"/>	<p style="font-size: 8px; margin-bottom: 5px;">Subscription Status</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="ACTIVE"/>
<p style="font-size: 8px; margin-bottom: 5px;">Last Known Location (DD.ddddd)</p> <input 1°="" 21'="" 58"w"="" n="" style="width: 95%; border: 1px solid #ccc;" type="text" value="50° 59'10"/>	<p style="font-size: 8px; margin-bottom: 5px;">Last Location Time (GMT)</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="29/05/2023 07:00:45"/>

<p style="font-size: 8px; margin-bottom: 5px;">IMEI</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="358876107404759"/> <p style="font-size: 8px; margin-top: 5px;">IMEI should be 15 digits</p>	<p style="font-size: 8px; margin-bottom: 5px;">IMO number</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="IMO12345678"/> <p style="font-size: 8px; margin-top: 5px;">max 18 chars</p>
<p style="font-size: 8px; margin-bottom: 5px;">Registration number</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="RN 12345678"/> <p style="font-size: 8px; margin-top: 5px;">max 24 chars</p>	<p style="font-size: 8px; margin-bottom: 5px;">Vessel Type</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="Bulk carrier"/>
<p style="font-size: 8px; margin-bottom: 5px;">Fishing license</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="FL 12345678"/> <p style="font-size: 8px; margin-top: 5px;">max 24 chars</p>	<p style="font-size: 8px; margin-bottom: 5px;">Length</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="900"/> <p style="font-size: 8px; margin-top: 5px;">in meters(Max: 999)</p>
<p style="font-size: 8px; margin-bottom: 5px;">Fleet</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="fleet"/>	<p style="font-size: 8px; margin-bottom: 5px;">Region</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="1"/>
<p style="font-size: 8px; margin-bottom: 5px;">Contract Id</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="658724"/> <p style="font-size: 8px; margin-top: 5px;">max 24 chars</p>	<p style="font-size: 8px; margin-bottom: 5px;">Profile</p> <input style="width: 95%; border: 1px solid #ccc;" type="text" value="NewTestProfilea1"/>

SAVE



Captain Details

This section includes details about the captain such as Captain Name, Captain Mobile Number, Captain Email Address.

^ Captain details

Captain Name CN OWL1 <small>max 24 chars</small>	Captain Mobile Number* +8821622990045 <small>max 24 chars</small>
Captain Email Address* Captain_America@gmail.com <small>max 40 chars</small>	

Boat Owner Details

This section includes details about the Boat Owner such as Boat Owner Name, Boat Owner Mobile Number, Boat Owner Email Address.

^ Boat owner details

Boat Owner Name BON_Jess <small>max 24 chars</small>	Boat Owner Mobile Number 009719999 <small>max 24 chars</small>
Boat Owner Email Address jess@thuraya.com <small>max 40 chars</small>	

SAVE

Hardware and Firmware Details

This section includes details about the Hardware such as ADU S/N, BDU S/N, Firmware and Reason (Reason to change the ADU/BDU/IMEI/FW).

^ Hardware and firmware

ADU S/N 3452617889 <small>ADU S/N should be 12 chars</small>	BDU S/N 234156722 <small>BDU S/N should be 12 chars</small>
Firmware MNB_1.2_S1_TH <small>Firmware should be 32 chars</small>	Reason* Faulty Item <small>Reason to change the ADU/BDU/IMEI/FW</small>

SAVE



3.2.2 Tracking







 
Clicking the 'Tracking and Monitoring' tab opens the Tracking & Monitoring map view with trails visible on the map.


3.2.2.1 Tracking Map & Table View

Tracking History will display the history of the points in time the vessel has been tracked and the locations of the vessel at that time. It will also display the type of tracking event received (polled, tracking by time, tracking by speed, tracking by distance), Alert events, GeoFence, SOS, Course(in deg) which is the difference between the location in the tracks.

Note: Weather information is sourced from World weather online. There might be some differences with weather forecast from local agencies

Vessel Icon colors and event types

-  Tracking
-  SOS
-  Power Cycle
-  Reset
-  Signal Strength
-  GPS Antenna
-  GPIO 1 & 2

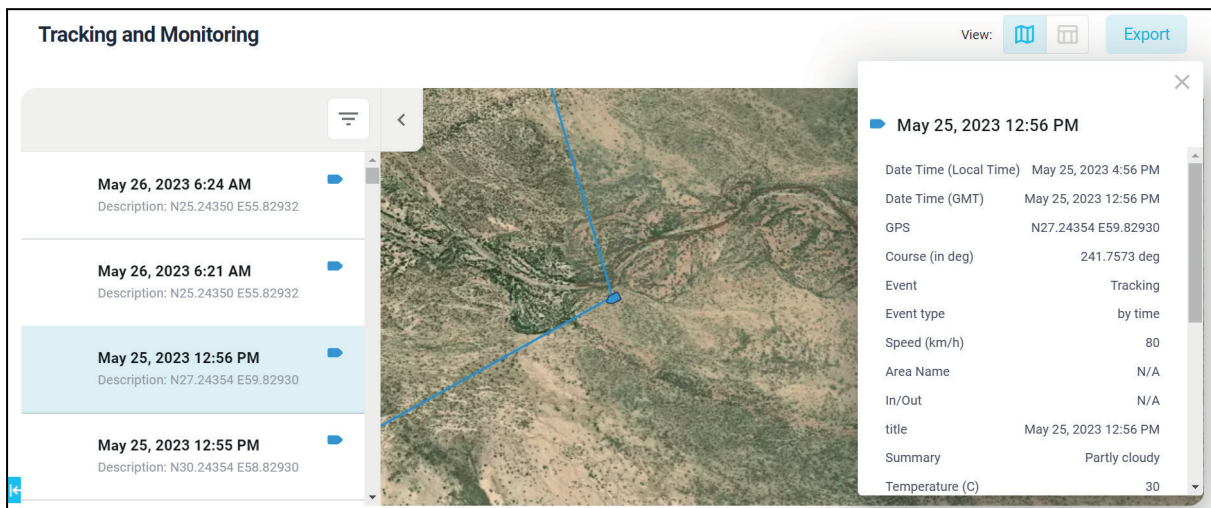


The screenshot displays the 'Tracking and Monitoring' interface. On the left, a list of tracking events is shown, with the selected event highlighted in blue. The selected event is from May 25, 2023, at 12:56 PM, with a description of N27.24354 E59.82930. The main area shows a satellite map with a blue line indicating the vessel's path. On the right, a detailed event log is displayed for the selected event.

May 25, 2023 12:56 PM	
Date Time (Local Time)	May 25, 2023 4:56 PM
Date Time (GMT)	May 25, 2023 12:56 PM
GPS	N27.24354 E59.82930
Course (in deg)	241.7573 deg
Event	Tracking
Event type	by time
Speed (km/h)	80
Area Name	N/A
In/Out	N/A
title	May 25, 2023 12:56 PM
Summary	Partly cloudy
Temperature (C)	30



Tracking and Monitoring										View:			Export
Date Time (Local Time)	Date Time (GMT)	GPS	Course (In Deg)	Event	Event Type	Speed (Knots)	Area Name	In/Out	Message	Reason For Power			
Aug 9, 2023 11:40 AM	Aug 9, 2023 11:40 AM	N25.24347 E55.82930	173.5494 deg	Tracking	by time	0	N/A	N/A					
Aug 9, 2023 10:40 AM	Aug 9, 2023 10:40 AM	N25.24355 E55.82929	173.5494 deg	Tracking	by time	0	N/A	N/A					
Aug 9, 2023 9:40 AM	Aug 9, 2023 9:40 AM	N25.24352 E55.82926	42.1294 deg	Tracking	by time	0	N/A	N/A					
Aug 9, 2023 8:40 AM	Aug 9, 2023 8:40 AM	N25.24355 E55.82924	148.9099 deg	Tracking	by time	0	N/A	N/A					

The refresh button (the button on the top right of the table with a circular arrow icon) can be used in case you would like to manually check for any new messages that might have arrived from the terminal.

This tracking history can be exported to a csv format using the  button. We can also filter the tracking history by duration, Event and

Event type using the filter  button.

Exporting the tracking data into a csv file:

Step 1: Click on the “Export” button.

Step 2: The file will be downloaded to your computer. It will be available in the “Downloads” folder in your computer.

Tip:

 
1. If you are opening the downloaded csv file in excel, ensure that you are setting the format of the “MSISDN” column to text. This will ensure that the MSISDN shows up correctly.
2. To display UTF-8 compliant CSV files when they contain non-English characters correctly, please follow below steps:
 - a. open the CSV file using Notepad.
 - b. Click "File > Save As".
 - c. In the dialog window that appears - select "ANSI" from the "Encoding" field. Then click "Save".




d. Open this new CSV file using Excel. Non-English characters will now appear correctly in the file.

Filtering of Tracking Data:

The Filter allows you to select the duration of the tracking trail that you want to display on the map/table for a vessel. Default filters available are Last Day, Last 7 Days, Last 30 Days, Last 60 Days.

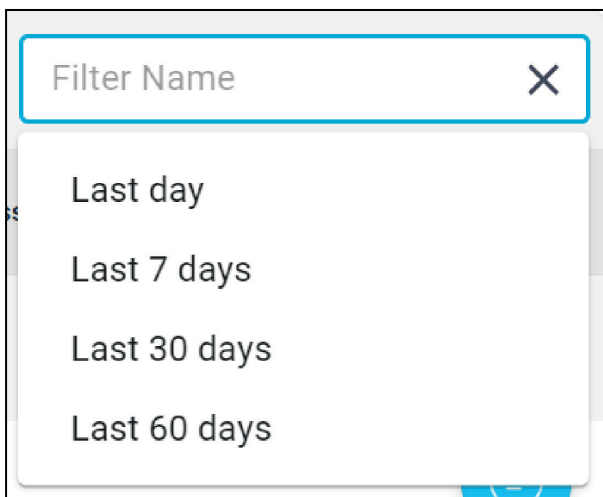

 We can also create our own filters by selecting the duration, Event, Event Type.

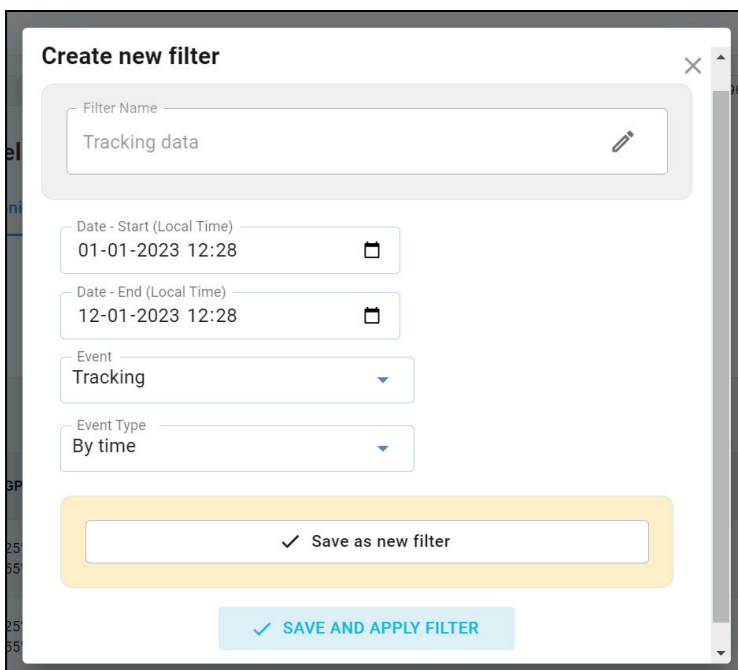



3.2.3 Configuration

Important Note: As an End User, you will be able to view & update all the configurations except for captain password.

3.2.3.1 Vessel Information

Important Note: As an End User, you will only be able to update the Vessel Information.

This function enables you to view & update Vessel name, IMO, Registration Number, Fishing License, Vessel Type, Details to be Sent to Terminal, Captain Name, Captain Mobile Number, Boat Owner Name, and Boat Owner Mobile Number.

Users can also retrieve vessel details from the terminal.

^ Vessel Information

Vessel Name
VN Owl
max 24 chars

IMO Number
777
max 18 chars

Registration Number
RN 777
max 24 chars

Fishing License
FL 777
max 24 chars

Vessel Type
Bulk carrier

Details To Be Sent To Terminal
Boat Owner Details

Captain name
CN OWL1
max 24 chars

Captain mobile number
+8821622990045
max 24 chars

Boat owner name
GREATDRAGON1
max 24 chars

Boat owner mobile number
+9715076843578
max 24 chars

RETRIEVE FROM TERMINAL SEND TO TERMINAL

3.2.3.2 Tracking

Important Note: As an End User, you will only be able to view/update the settings in the tracking section.



There are three types of tracking available – by time, distance, and speed. The **Tracking** section enables you to set up any combination of these tracking parameters.

The screenshot shows a 'Tracking' configuration screen with the following fields and values:

- Tracking by time - interval: 45 (In minutes. min: 3; max: 14400 (10 days); default: 14400)
- Tracking by distance - interval: 45 (In minutes. min: 3; max: 14400 (10 days); default: 14400)
- Tracking by distance - distance: 83 (In km. min: 0.00; max: 999.99)
- Tracking by speed - interval: 45 (In minutes. min: 3; max: 14400 (10 days); default: 14400)
- Tracking by speed - lower speed: 0 (In km/h. min: 0; max: 99)
- Tracking by speed - upper speed: 45 (In km/h. min: lower speed; max: 999)

A 'SEND TO TERMINAL' button is located at the bottom right of the form.

Possible values:

Time interval	Allows you to change the tracking interval, which can be from 3 mins to 14400 min (10 days)
Distance	<p>This tracks the vessel's progress over a certain distance – which can be from 0 – 999 km</p> <p>This option has 2 parameters that can be configured:</p> <ol style="list-style-type: none"> 1. Tracking by distance - interval This defines the intervals at which the terminal will check the distance travelled. 2. Tracking by distance - distance This defines the distance to be covered before sending out the next location tracking message.
Speed	<p>This allows you to input an upper and lower speed limit.</p> <ol style="list-style-type: none"> 1. Tracking by speed - interval This defines the intervals at which the terminal will check the speed. 2. Lower speed limit can be between 0 and 99 km/h 3. Upper speed limit can be between the lower speed limit and 999 km/h <p>This option, once set, will trigger a notification from the terminal whenever the vessel speed falls below the lower limit or breaches the upper limit.</p>



3.2.3.3 Alert Types

The terminal can be configured to send alerts notifying you of changes to the terminal environment, like the signal strength going from 0 to 1, the terminal being reset, Power Cycle, GPS Antenna connection, GPIO1 and GPIO2 changes.

The **Alert Type** section allows you to view the current configuration and also enable/disable the events for which the terminal should send alert events.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

You can also click on “Retrieve from terminal” to retrieve the configuration from the terminal.





3.2.3.4 SOS Settings

This allows you to view the current configuration and also configure the SOS recipients and messages on the terminal.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

^ SOS Settings

Recipient 1
1002
Email (max 40 chars) or Phone (max 32 digits)

Recipient 2
3245678901
Email (max 40 chars) or Phone (max 32 digits)

Recipient 3
3245678901
Email (max 40 chars) or Phone (max 32 digits)

Recipient 4
3245678901
Email (max 40 chars) or Phone (max 32 digits)

Recipient 5
3245678901
Email (max 40 chars) or Phone (max 32 digits)

Email Message
msg1
Max 7 chars

SMS Message
sms12
Max 47 chars

Interval
60
In minutes, min: 3, max: 1440 (1 day)

SEND TO TERMINAL

3.2.3.5 Fish Types

Important Note: As an End User, you will be able to view/update the fish types configured onto the terminal. You will also be able to retrieve the catch reports from the terminal.

The **Fish types** section allows you to view the current configuration and also configure the fish types your vessel can fish and report.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.



You can also click on “Retrieve from terminal” to retrieve the configuration from the terminal.

^ Fish types

Fish Type 1
3
max 24 chars

Fish Type 2
3
max 24 chars

Fish Type 3
3
max 24 chars

Fish Type 4
3
max 24 chars

Fish Type 5
3
max 24 chars

Fish Type 6
3
max 24 chars

Fish Type 7
3
max 24 chars

Fish Type 8
3
max 24 chars

Fish Type 9
3
max 24 chars

Fish Type 10
3
max 24 chars

RETRIEVE FROM TERMINAL SEND TO TERMINAL

3.2.3.6 Fishing Gear

Important Note: As an End User, you will be able to view/update the fishing gear configured onto the terminal. You will also be able to manually retrieve the fishing gear information from the terminal.

The **Fishing gear** tab can be used to view the current configuration and also configure the fishing gear your vessel carries.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

You can also click on “Retrieve from terminal” to retrieve the configuration from the terminal.

^ Fishing gear

Fishing Gear 1
3
max 24 chars

Fishing Gear 2
3
max 24 chars

Fishing Gear 3
3
max 24 chars

Fishing Gear 4
3
max 24 chars

Fishing Gear 5
3
max 24 chars

RETRIEVE FROM TERMINAL SEND TO TERMINAL



3.2.3.7 GPIO Control & Function

Important Note: As a Thuraya End User, you will be able to view/update the GPIO settings.

The **GPIO Control & Function** section is for third-party devices which may be connected to your Thuraya terminal.

The exact function of the switches will depend on how your system is set up – speak to your Thuraya Service Partner to learn more

GPIO3 and GPIO4 can be remotely switched from the Thuraya SatTrack software – changing this will affect the relay switch.

By default, GPIO 1 switch is an SOS alarm and GPIO3 sets off a buzzer on the terminal. These defaults can be switched to another function using the dropdown

By default, the GPIO4 switch performs no action – unless your Thuraya End User has configured it to connect to something.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

You can also click on “Retrieve from terminal” to retrieve the configuration from the terminal.

GPIO control

GPIO3 GPIO4

GPIO3 text: 45_I03 GPIO4 text: 45_I04

SEND TO TERMINAL

GPIO function

GPIO1 Function: General GPIO3 Function: Buzzer

GPIO1 text: 45_I01function GPIO3 text: 4545GPIO3function

RETRIEVE FROM TERMINAL SEND TO TERMINAL




3.2.3.8 Captain Password

Important Note: As an End User, you will be able to only view the Captain Password. You will not be able to make any modifications to the Captain Password.

3.2.3.9 Request for Admin Password Change

End User can only request to change the admin password by entering the reason for changing the admin passwords. The request can be Approved/ Rejected by the users Customer profile users/Reseller/SP/Customer Care.

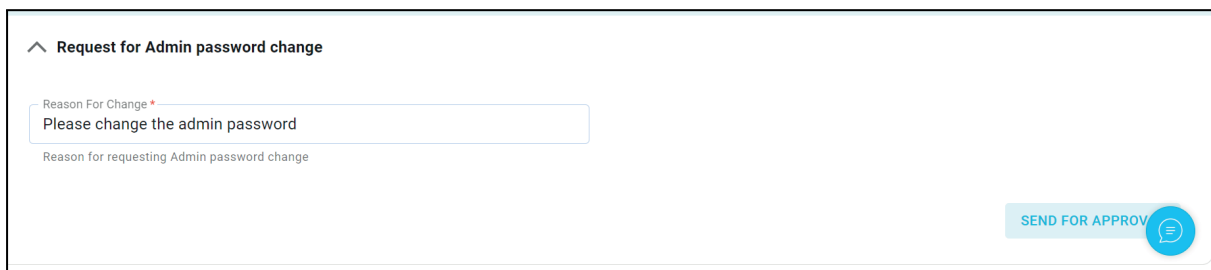

^ Request for Admin password change

Reason For Change *
Please change the admin password

Reason for requesting Admin password change


SEND FOR APPROVAL

3.2.3.9 Report Server Settings

Important Note: As an End User, you will be able to view/update the Report Server Settings.

The **Reporting Server settings** tab can be used to view the current configuration and also configure the reporting server and recipients for your terminal.

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

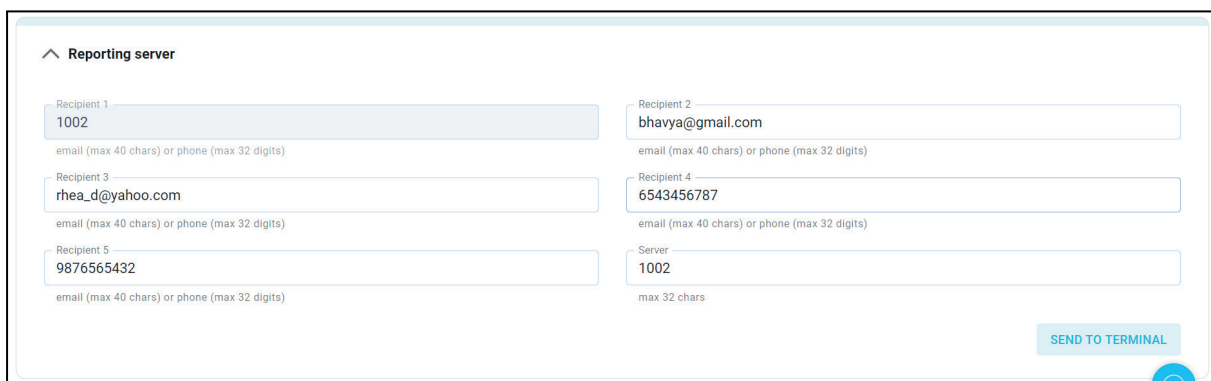

^ Reporting server

Recipient 1 1002 email (max 40 chars) or phone (max 32 digits)	Recipient 2 bhavya@gmail.com email (max 40 chars) or phone (max 32 digits)
Recipient 3 rhea_d@yahoo.com email (max 40 chars) or phone (max 32 digits)	Recipient 4 6543456787 email (max 40 chars) or phone (max 32 digits)
Recipient 5 9876565432 email (max 40 chars) or phone (max 32 digits)	Server 1002 max 32 chars

SEND TO TERMINAL



3.2.4 Fish Catch Reports

Important Note: As an End User, you will only be able to view the catch reports sent from the terminal. You will also be able to manually retrieve the catch reports from the terminal.

The **Catch Reports** tab shows the catch reports submitted by the terminal. It displays the time the report was submitted, the fish type and the catch weight if entered by the terminal (normally entered in kilograms)

There are two kinds of fish catch reports.

1. Reports retrieved from the terminal by the end user:
These reports show up with the Source as “polled”
2. Reports sent from the terminal (as a push from the terminal)
These reports show up with the Source as “terminal”

Reports automatically refresh in this table when a fish catch report is received from the terminal.

Fish Catch Reports										
Date & Time (Local Time)	Date & Time (GMT)	Source	GPS	Speed (Knots)	Fish Type 1	Fish Weight 1 (Kg)	Fish Type 2	Fish Weight 2 (Kg)	Fish Type 3	Fish Weight 3 (Kg)
Jul 3, 2023 10:17 AM	Jul 3, 2023 6:17 AM	Terminal	25° 14'36"N 55° 49'45"E	0	LuxuryProfile Fish	5	Tilapia	14	Seabus	9
Jun 21, 2023 11:56 AM	Jun 21, 2023 7:56 AM	Polled	25° 14'36"N 55° 49'45"E	0	LuxuryProfile Fish	17	Tilapia	25	Seabus	32
Jun 21, 2023 11:42 AM	Jun 21, 2023 7:42 AM	Polled	25° 14'36"N 55° 49'45"E	0	LuxuryProfile Fish	17	Adf	25	Jam	32
Jun 21, 2023 11:41 AM	Jun 21, 2023 7:41 AM	Terminal	25° 14'36"N 55° 49'45"E	0	LuxuryProfile Fish	14	Adf	13	Jam	7
Jun 20, 2023 12:41 PM	Jun 20, 2023 8:41 AM	Polled	25° 14'36"N 55° 49'45"E	0	LuxuryProfile Fish	14	Unknown	13	Unknown	

The refresh button (the button on the top right of the table with a circular arrow icon) can be used in case you would like to manually check for any new messages that might have arrived from the terminal.



Clicking on the Export button will export the fish catch reports and download it onto the user's PC.

Tip:

1. If you are opening the downloaded csv file in excel, ensure that you are setting the format of the "MSISDN" column to text. This will ensure that the MSISDN shows up correctly.
2. To display UTF-8 compliant CSV files when they contain non-English characters correctly, please follow below steps:
 - a. open the CSV file using Notepad.
 - b. Click "File > Save As".
 - c. In the dialog window that appears - select "ANSI" from the "Encoding" field. Then click "Save".
 - d. Open this new CSV file using Excel. Non-English characters will now appear correctly in the file.

Clicking on the Filter button next to the "Export" button allows the user to filter the Fish catch report data using parameters such as date and time.

3.2.5 Messages

Important Note: As an End User, you will be able to see the history of messages sent from the portal to the terminal. You will also be able to send any messages to the terminal.

Thuraya SatTrack has a message interface to send messages to and receive messages from Thuraya terminals.

Messages can be used to send the crew weather, emergency, news and information updates.



The **Messages** tab shows a history of all the messages sent from the portal to the terminal.

Messages

Search... [X] [Filter] [Refresh]

Date And Time (Local Time)	Date And Time (GMT)	Direction	Message Type	Message
Aug 4, 2023 4:13 AM	Aug 4, 2023 4:13 AM	received	Text	Adj
Jul 31, 2023 9:12 AM	Jul 31, 2023 9:12 AM	received	Text	Mwmw
Jul 25, 2023 6:03 AM	Jul 25, 2023 6:03 AM	sent	Text	CNFI10001;00000000;0;00000000;00000000;00000000;
Jul 25, 2023 5:25 AM	Jul 25, 2023 5:25 AM	sent	Text	CNFD90001;00000000;2;1;200N17.86843E083.12291;201N17.40252E083.16136;202N17.76384E083.56236;
Jul 17, 2023 12:19 PM	Jul 17, 2023 12:19 PM	sent	Text	CNFF70001;00000000;0;1;5;1;30;277.80;0;1;30;0;185;
Jul 17, 2023 12:17 PM	Jul 17, 2023 12:17 PM	sent	Text	CNFF70001;00000000;0;1;5;1;30;277.8;0;1;30;0;185;
Jul 11, 2023 3:15 AM	Jul 11, 2023 3:15 AM	sent	Text	test123

[Refresh]

The refresh button (the button on the top right of the table with a circular arrow icon) can be used in case you would like to manually check for any new messages that might have arrived from the terminal.

Messages can be filtered by duration, Message Direction and Message type.

Create new filter

Filter Name
Sent Messages

Message From Date
01-01-2023 16:13

Message To Date
12-01-2023 16:13

Message Direction*
sent

Message Type*
All messages

Save as new filter


SAVE AND APPLY FILTER




3.2.6 Call Logs

Important Note: As an End User, you will be able to see the data. You will also be able to retrieve the data from the terminal.

Click on the '**Calls Logs**' tab to view the call history of the MarineStar terminal on board a particular vessel. Outgoing calls made from the terminal, Incoming calls received by the terminal and Calls missed by the terminal are displayed here.

Click on the  icon and select Retrieve incoming calls/ Retrieve missed calls/ Retrieve outgoing calls to retrieve the calls from the terminal.

Call Logs can be filtered by duration and Call type.

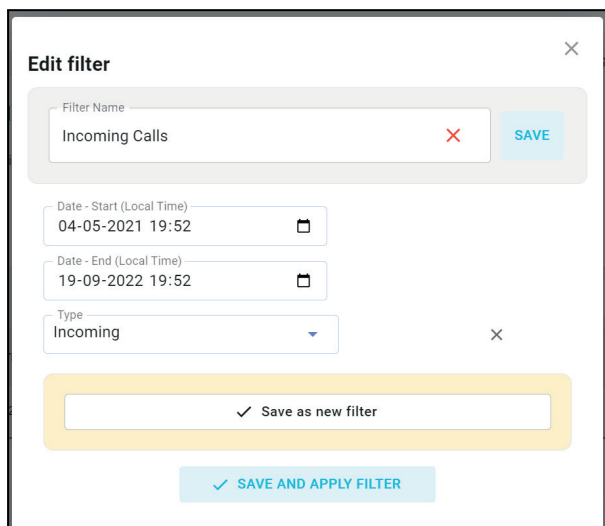


3.2.7 Call Manager

3.2.7.1 Crew calling

Important Note: As an End User, you will be able to view the Crew calling setting (whether it is enabled or disabled). You will also be able to modify the settings on the portal/terminal.



 The toggle button under Crew Calling allows enabling or disabling the crew from making calls.

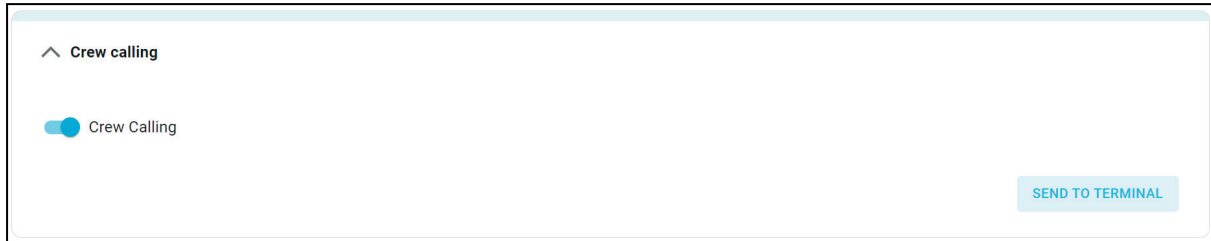

You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

 
3.2.7.2 Speed dial

Important Note: As an End User, you will be able view/update the speed dial numbers.

1. The first speed dial number (1) is always configured to the voice message (123). Hence only speed dials 2 - 9 are configurable.
2. Speed dial numbers are limited to a maximum of 32 digits only (including the leading +)

Tip:

PSTN numbers can be entered with a prefix of 00 before the country code or a prefix of + before the country code.

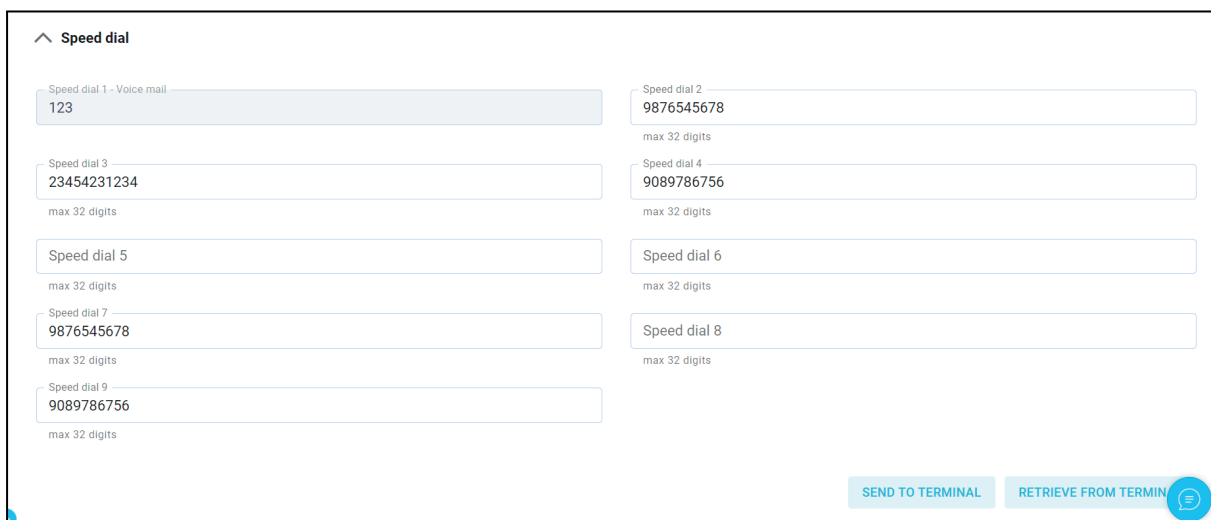



You can make changes and click on the “Send to terminal” button to send the changes to the terminal.

3.2.7.3 Whitelist

Important Note: As a Thuraya End User, you will be able to view/update the Whitelist settings (whether they are enabled or disabled) and Whitelist numbers.

You can view the current status of whitelist setting and currently whitelisted numbers as well:

1. enable/disable the whitelist setting
2. Configure/edit the whitelisted numbers.

Clicking on “Send to terminal” will send this setting as well as the numbers to the terminal for configuration.

White List

Whitelist

White List Number 1
1002

White List Number 2
9089786756
max 15 digits

White List Number 3
6060
max 15 digits

White List Number 4
9876545678
max 15 digits

White List Number 5
23454231234
max 15 digits

White List Number 6
9089786756
max 15 digits

White List Number 7

White List Number 8

1. A maximum of 25 numbers can be whitelisted.
2. The first whitelisted number is 1002, hence users can only configure 24 numbers on the portal.
3. Whitelist numbers added on the terminal directly cannot be retrieved by the portal. They will be overwritten by the numbers added on the portal.
4. Whitelisting a number will allow the terminal to only call (outgoing calls) and receive calls (incoming calls) from that number.



The **Whitelist** section allows you to allow only a restricted list of numbers to call the terminal or for the terminal to call [whitelist]. In other words, incoming calls to the terminal and outgoing calls from the terminal are only allowed to this/these number(s).

3.2.7.4 Blacklist

Important Note: As a Thuraya End User, you will be able to view/update the Blacklist settings (whether they are enabled or disabled) & Blacklist numbers.

You can view the current status of blacklist setting and currently blacklisted numbers as well:

1. enable/disable the blacklist setting
2. Configure/edit the blacklisted numbers.

Clicking on “Send to terminal” will send this setting as well as the numbers to the terminal for configuration.

Black List

Blacklist

Black List Number 1
23454231234
max 15 digits

Black List Number 2
9089786756
max 15 digits

Black List Number 3
9089786756
max 15 digits

Black List Number 4
9089786756
max 15 digits

Black List Number 5
23454231234
max 15 digits

Black List Number 6
9089786756
max 15 digits

Black List Number 7
max 15 digits

Black List Number 8
max 15 digits

1. Do not add 1002 as a blacklist number as this will prevent the terminal from sending any messages to the portal.
2. A maximum of 25 numbers can be blacklisted.
3. Blacklist numbers added on the terminal directly cannot be retrieved by the portal. They will be overwritten by the numbers added on the portal.



4. Blacklisting a number will not allow the terminal to either receive (incoming calls) or call (outgoing calls) to that number.

The **Blacklist tab** allows you to block certain numbers from calling the terminal or the terminal calling the number [blacklist].

In other words, incoming calls to the terminal and outgoing calls from the terminal are not allowed to this/these number(s).

3.2.8 Portal Tracking Areas

Important Note: As an End User, you will be able to view/add the Portal Tracking Areas.

Areas can be defined on the map for tracking purposes. Thuraya SatTrack portal allows a user to add upto 100 tracking areas on the portal. These are not configured onto the terminal but used on the portal only for tracking.

Tracking by portal areas is dependent on the location reported by the terminal. Based on the latest location reported by the terminal, the SatTrack portal will flag the tracking alert as “portal area” if it is within one of the configured and enabled portal tracking areas.

These alerts will be visible in the [Tracking and Monitoring table and map view](#) with event type as “portal area”, the name of the area that the vessel has entered or exited and the current status (“in” the area or “out” of the area).

Portal Tracking Areas			
	* Area Name	Status	Comments/Description
⋮	WesternAustralia160123	Enabled	western Australia again
⋮	Sjh Airport	Enabled	sharjah airport
⋮	Southern Madagascar22022023	Enabled	

You can add new portal tracking areas by clicking on “New area” button and then choosing an area that has been previously created by you (Please refer to [Areas](#) on steps to create a new area)



 
The display shows the Portal Tracking areas saved on the portal. This tab shows all the areas set up as portal tracking areas.

Viewing Portal Tracking areas on map:

Step 1: Go to Tracking and Monitoring Map view.

Step 2: Click on Settings icon

Step 3: Select Portal Tracking Areas under Areas. The areas will appear on the map.

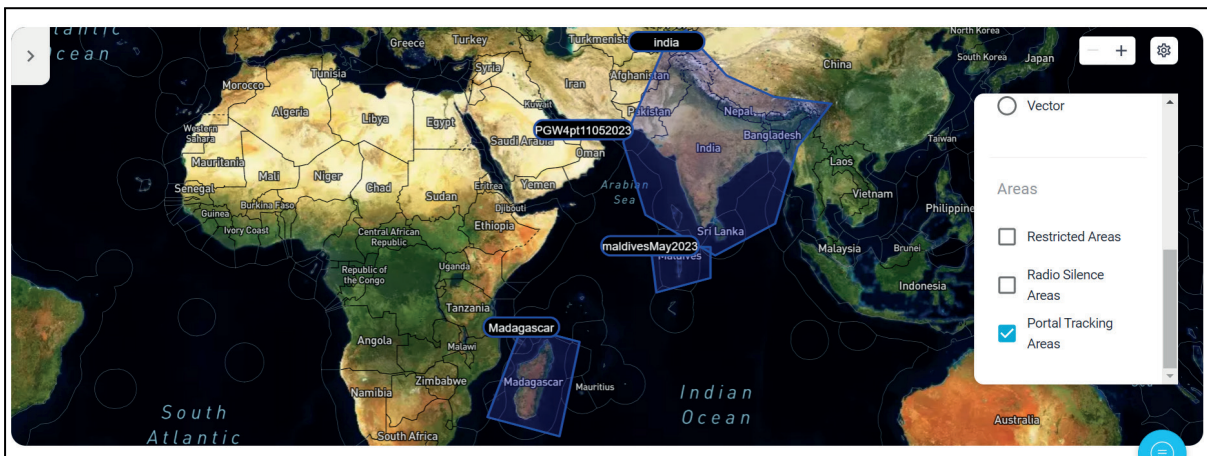

3.2.9 Radio Silence Areas

Important Note: As an End User, you will only be able to view/add the Radio silence Areas.

Radio Silence Zones				
	Number	Area Name	Status	Comments/Description
⋮	1	RS1	Disabled	
⋮	2	RS2	Disabled	
⋮	3	WesternAustralia160123	Enabled	
⋮	4	india	Disabled	
⋮	5	Madagascar	Enabled	
⋮	6	3ptAcademicCity170123	Disabled	



Areas can be defined on the map for tracking purposes. For example, You can configure the areas to stop transmissions from the terminal when it is entering a radio silence zone. Areas [geofences] saved under Radio Silence turn off the transmission from the terminal when the vessel enters this area.

The display shows the Radio Silence areas saved on the MarineStar terminal. The portal allows up to 10 Radio silence areas with 10 geo-coordinates each to be saved on the terminal. Areas saved to the terminal are displayed on the radio silence tab. This tab shows all the areas that are set up as Radio Silence zones on the terminal.

When the terminal enters a Radio silence zone that is enabled, a radio silence zone report (RS) is sent to the portal. These alerts will be visible in the [Tracking and Monitoring table and map view](#) with event type as “Radio silence”, the name of the area that the vessel has entered or exited and the current status (“in” the area or “out” of the area)

You can add/edit radio silence areas on the terminal by clicking on the contextual menu against the slot that you want to configure. Choose the “Edit” option and then select the area you want to configure from areas that have been previously created by you (Please refer to [Areas](#) on steps to create a new area).

Clicking on save will send the area configuration to the terminal.

Please refer to the Thuraya MarineStar user manual for more information.

 
Viewing Radio Silence areas on map:

Step 1: Go to Tracking and Monitoring Map view.

Step 2: Click on Settings icon 



Step 3: Select Radio Silence Areas under Areas. The areas will appear on the map.

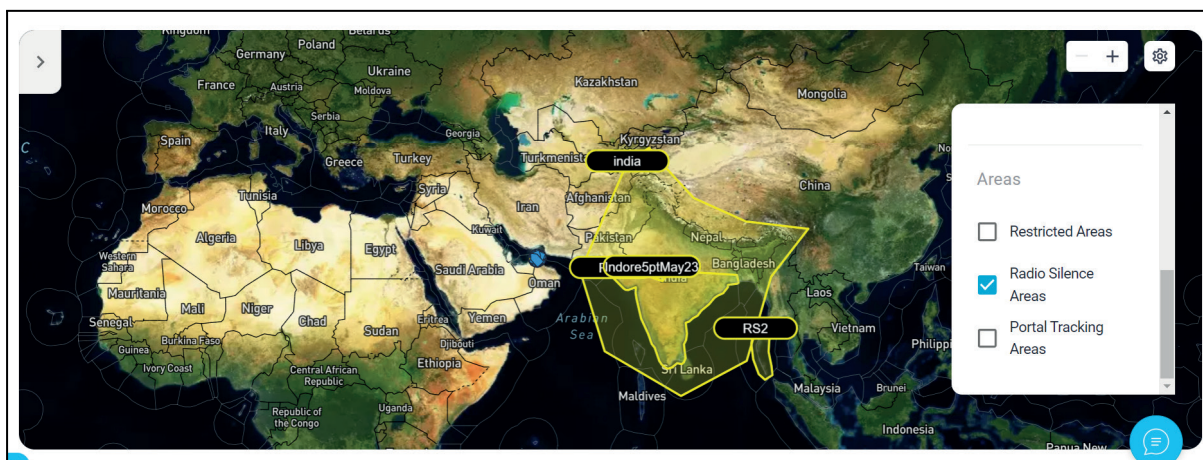

3.2.10 Restricted Zones

Important Note: As an End User, you will be able to view/add the Restricted Zone Areas.

Areas can be defined on the map for tracking purposes. Areas [geofences] saved under Restricted Zone will sound an alarm on the terminal when the vessel enters them.

Restricted Zones				
	Number	* Area Name	Status	Comments/Description
⋮	1	Southern Madagascar22022023	Enabled	
⋮	2		Disabled	
⋮	3		Disabled	
⋮	4	Riyadh	Enabled	
⋮	5	3ptAcademicCity170123	Enabled	Academia
⋮	6		Disabled	

The display shows the Restricted Zone areas saved on the MarineStar terminal. The portal allows up to 10 Restricted zone areas with 10 geo-coordinates each to be saved on the terminal. Areas saved to the



terminal are displayed on the Restricted zones tab. This tab shows all the areas that are set up as restricted zones on the terminal.

When the terminal enters a Restricted zone that is enabled, a restricted zone report (RZ) is sent to the portal. These alerts will be visible in the [Tracking and Monitoring table and map view](#) with event type as “Restricted zone”, the name of the area that the vessel has entered or exited and the current status (“in” the area or “out” of the area)

You can add/edit restricted zone areas on the terminal by clicking on the contextual menu against the slot that you want to configure. Choose the “Edit” option and then select the area you want to configure from areas that have been previously created by you (Please refer to [Areas](#) on steps to create a new area).

Please refer to the Thuraya MarineStar user manual for more information.

Viewing Restricted Zone areas on map:

Step 1: Go to Tracking and Monitoring Map view.

Step 2: Click on Settings icon 

Step 3: Select Restricted Zone Areas under Areas. The areas will appear on the map.







4. Map display options

There are two types of map options available - Satellite and Basic vector

Click on the Settings icon at the top right corner of the map. Select the option “Satellite” for Satellite map and “Vector” for Basic vector map under Map view. The displayed map will be updated.

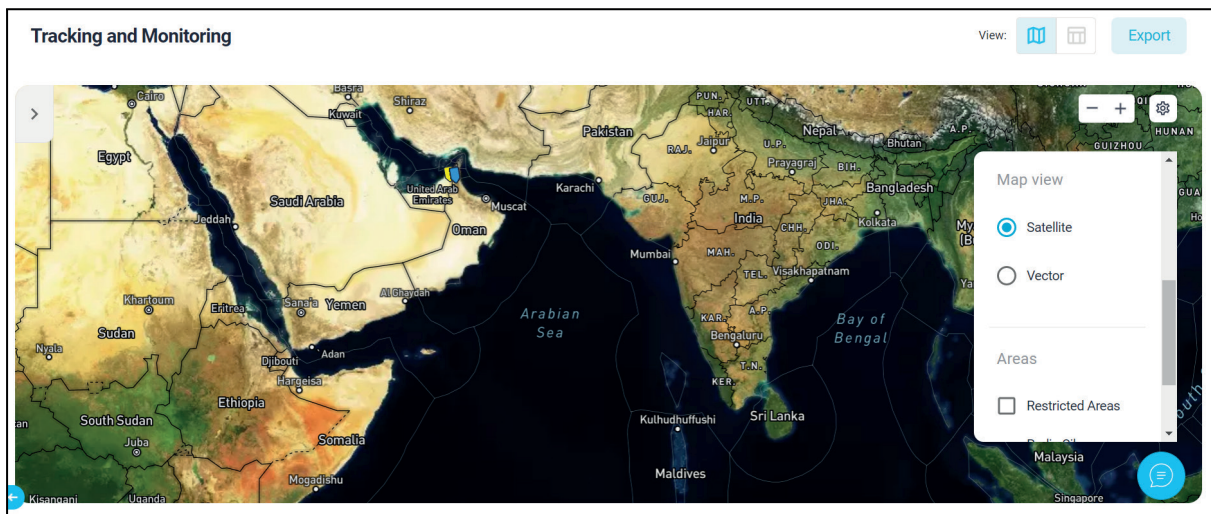 

[Satellite map]

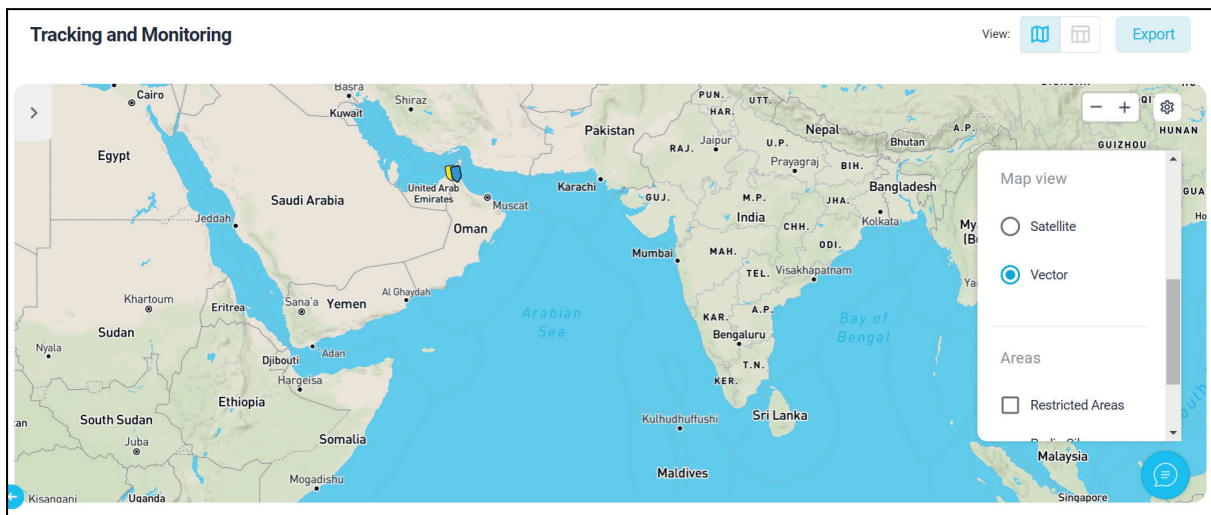 

[Vector map]



5. Overlays

5.1 FAO

 
The FAO zones (Food and Agriculture organization defined zones for fisheries) are available as an overlay on the map.

The FAO Zones are displayed as thin grey lines on the map.

Enabling/Disabling of the FAO Zones overlay:

Step 1: Click on the Settings icon displayed on the map.

Step 2: Select the “FAO” radio button. It will turn ON the FAO Zones.

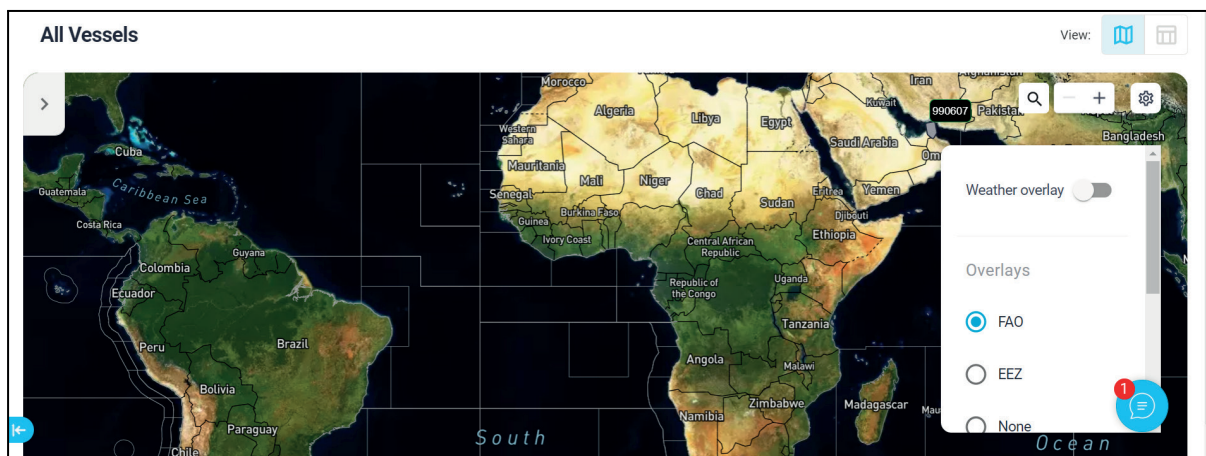

5.2 EEZ

 
An EEZ (exclusive economic zone) is an area of the ocean, generally extending 200 nautical miles (230 miles) beyond a nation's territorial sea, within which a coastal nation has jurisdiction over both living and nonliving resources.

Enabling/Disabling of the EEZ:

Step 1: Click on the Settings icon displayed on the map.



Step 2: Select the “EEZ” radio button. It will turn ON the EEZ overlay.

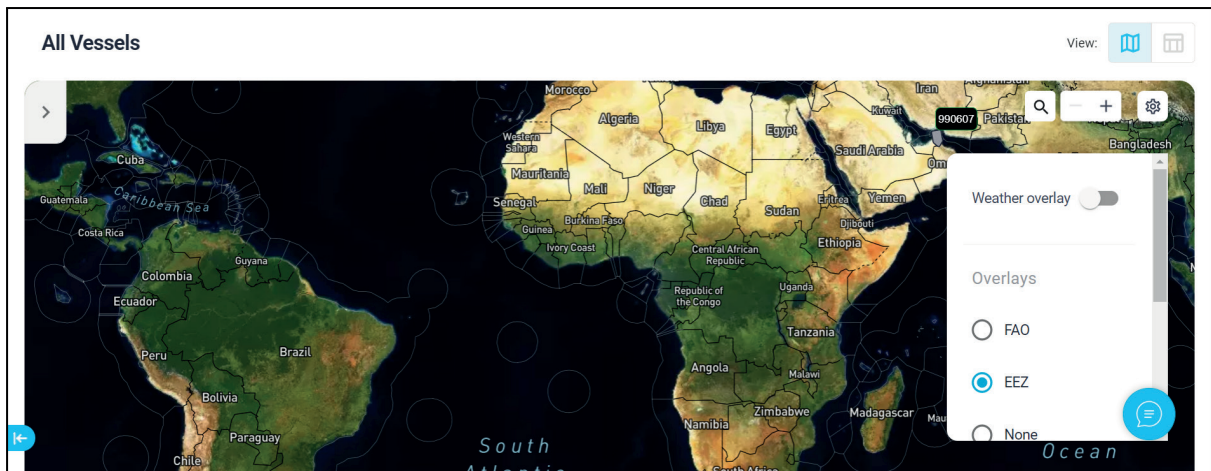


5.3 Weather Overlay

Enabling/Disabling of the Weather overlay:

Step 1: Click on the Settings icon displayed on the map.

 Step 2: Switch ON the Weather Overlay. It will turn ON the Weather overlay.

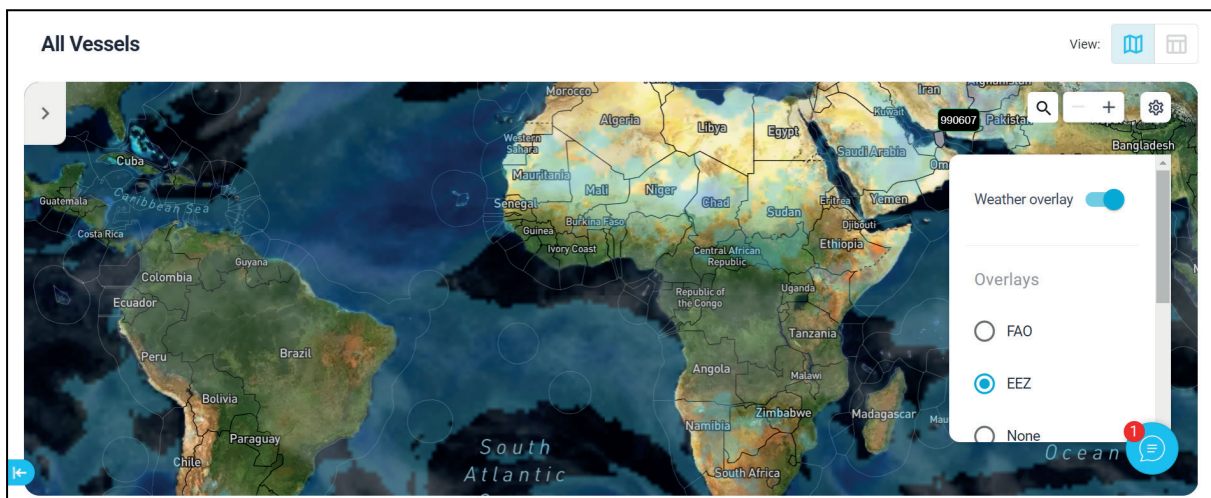


5.4 Custom Overlay

Important Note: As an End User, you will be able to import and view the imported Overlays on the All vessels screen.



 Custom overlays can be created by the user with the help geojson file.

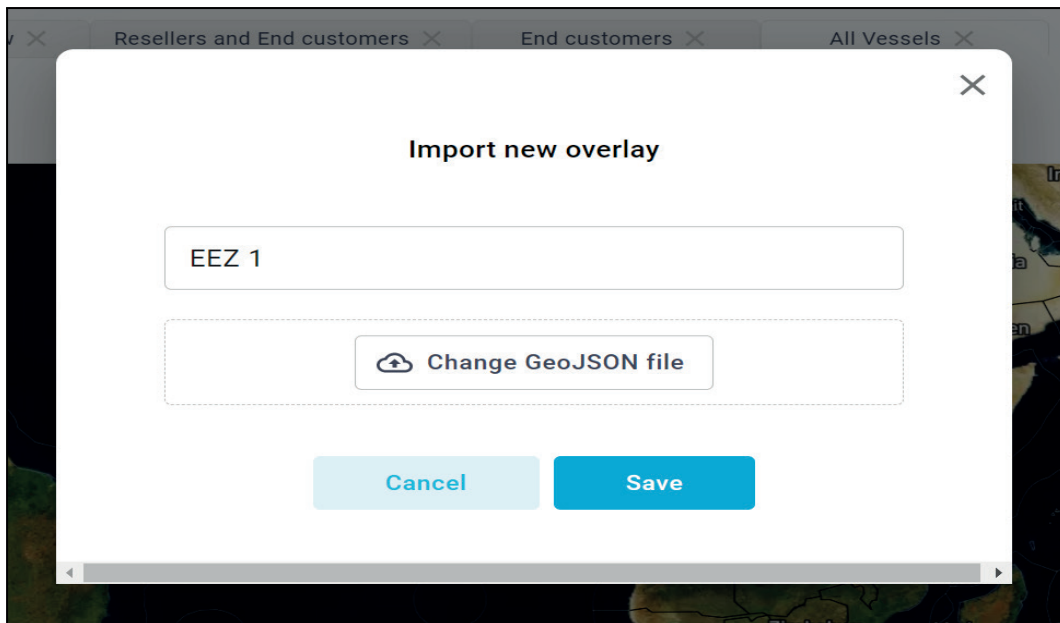

6. My Information

My Information displays the Role, License Key, Name Email ID details of the logged in user.

My Information	
Service partner	UATChrisSP
Regulator	Chris Regulator1
Role	Regulator level1
License key	6kz4X6L9Mg
Name	Cuatreg
Email ID	bhavya+cuatreg@frontm.com



7. Fleets & Regions

7.1 Fleets

 
User can create fleets of their vessels for ease of operations.

7.1.1 Fleets List


Step 1: Click on the menu button at the top left corner.

Step 2: Select the Fleets & Regions option from the drop-down menu.


Step 3: Select Fleets.

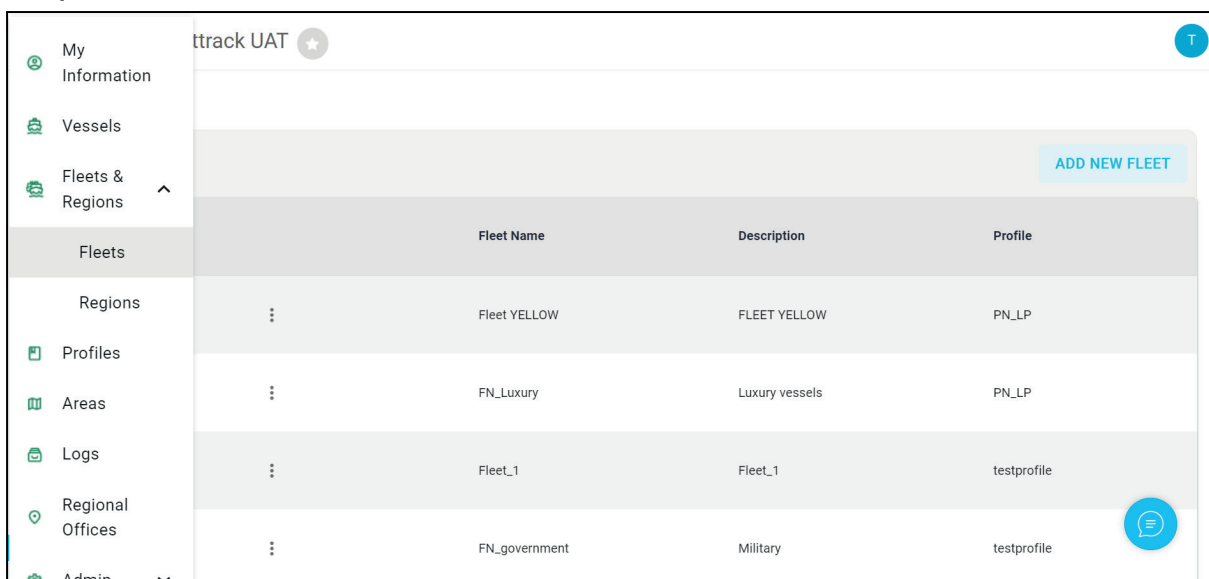


 
All the fleets that are created by you will be visible under the Fleets table.

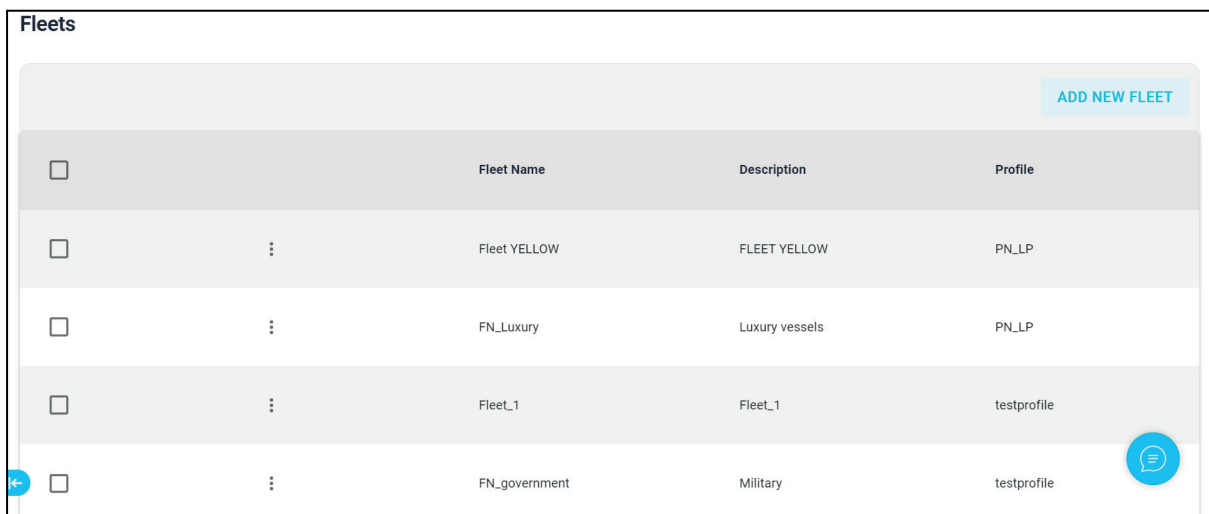




 The  checkbox next to each fleet will open the fleet menu which will allow you to perform functions such as Fleet information and Send OTA.

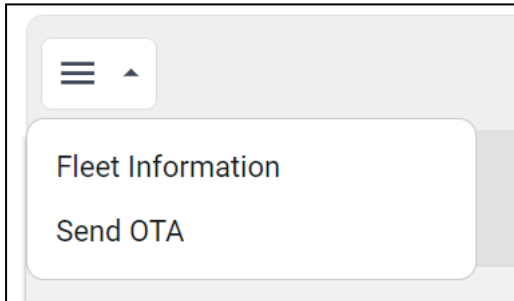

 The  button next to each fleet will allow you to delete the fleets.

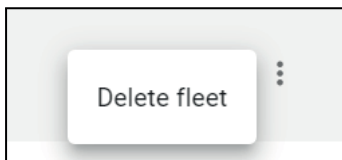


7.1.2 Adding a new fleet

Clicking on the “Add New Fleet” button at the top of the Fleet list will allow you to create a new fleet.

A new tab is opened to fill in the details and add fleet.

You can create fleets based on:

1. Vessels
2. Vessel Type
3. Regions

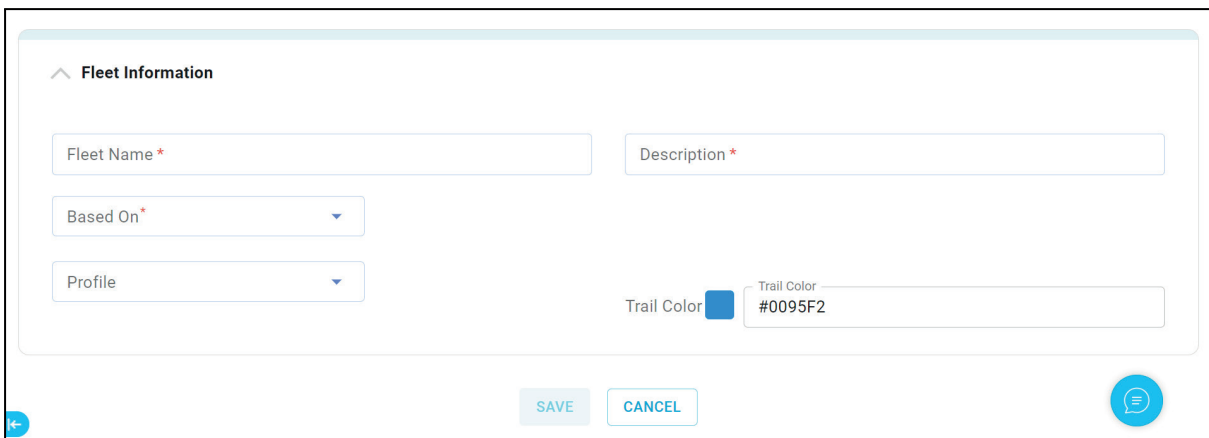

The screenshot shows a form titled "Fleet Information" with the following fields:

- Fleet Name *
- Description *
- Based On * (dropdown menu)
- Profile (dropdown menu)
- Trail Color (color picker) with a value of #0095F2


At the bottom of the form, there are "SAVE" and "CANCEL" buttons, and a blue circular icon with a speech bubble.



7.1.3 Edit a fleet

Select the fleet (by selecting the checkbox next to it in the fleet list), and the menu with “Fleet Information & “Send OTA” options will be enabled. Select Fleet Information to edit the fleet.

7.1.4 Delete a fleet

Select the Delete fleet option from the  menu. Click on the confirm button to delete the fleet.



7.1.5 Send OTA

Select the fleet (by selecting the checkbox next to it in the fleet list), and the menu with “Fleet Information & “Send OTA” options will be enabled. Select Send OTA option to send the OTA commands for the vessels in the fleet.



We can update Tracking, Alert types, SOS settings, Fish Types, Fishing gear, GPIO control & function, Crew Calling, Speed Dial, Whitelist, Blacklist, Radio Silence zones and Restricted zones of multiple vessels at a time using the send OTA feature. Each section will have a “Send to terminal” button.

7.2 Regions

Users can create regions of their vessels for ease of operations.

 
7.2.1 Regions List

Step 1: Click on the menu button at the top left corner.


Step 2: Select the Fleets & Regions option from the drop-down menu.




Step 3: Select Regions.

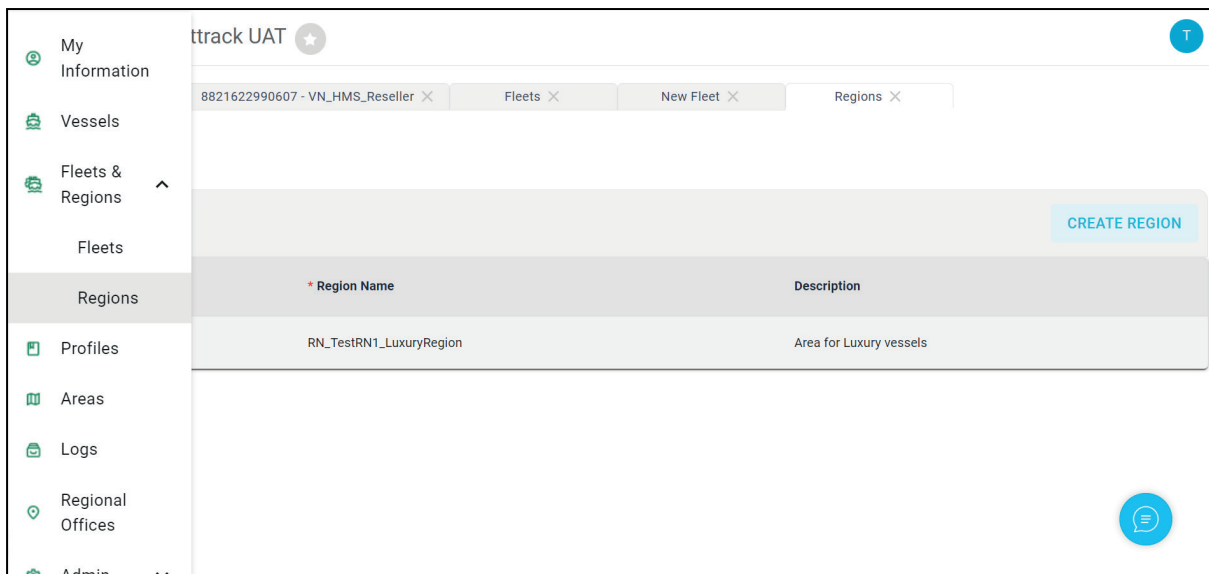

 All the regions that are created by you will be visible under the regions table.

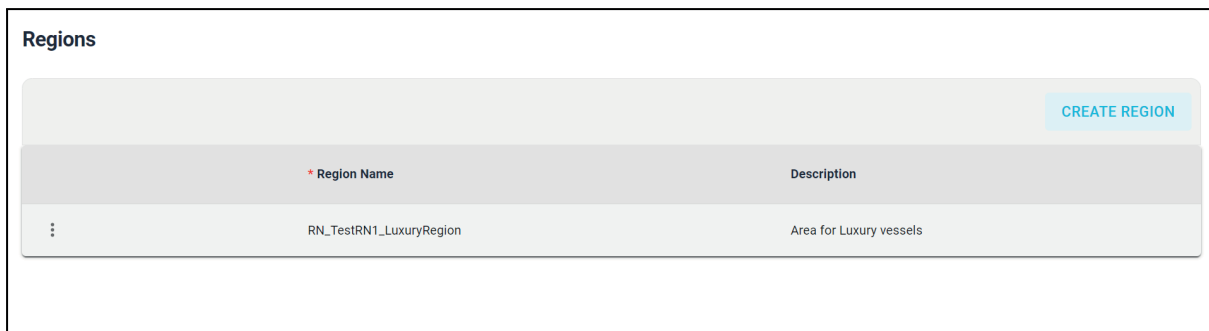

The  button next to each region will allow you to edit/delete the fleets.

7.2.2 Adding a new region

Clicking on the “Create Region” button at the top of the Region list will allow you to create a new region.




A new tab is opened to fill in the details and add region.

The screenshot shows a form with the following elements:

- Region name * (input field)
- Description (input field)
- Vessels (dropdown menu)
- SAVE (button)
- CANCEL (button)
- Upward arrow icon (top left)
- Blue circular icon with three dots (bottom right)

7.2.3 Edit a region

 Click on  button next to the region & select “Edit Region” option.

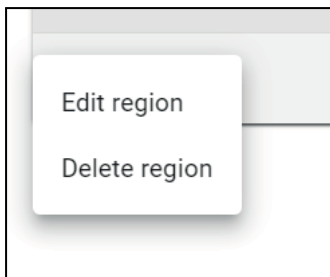


Update the region details and save.

The screenshot shows the form with the following updated values:

- Region Name * (input field): Region1
- Description (input field): Region1
- Vessels (dropdown menu): Princess I - 8821622990398
- SAVE (button)
- CANCEL (button)
- Upward arrow icon (top left)



7.2.4 Delete a region

Select the Delete region option from the  menu delete the region.

 
8. Profiles

User can create groups of fleets of their vessels for ease of operations.

 
8.1 Profiles List

Step 1: Click on the menu button at the top left corner.

Step 2: Select the Profiles option from the drop-down menu.

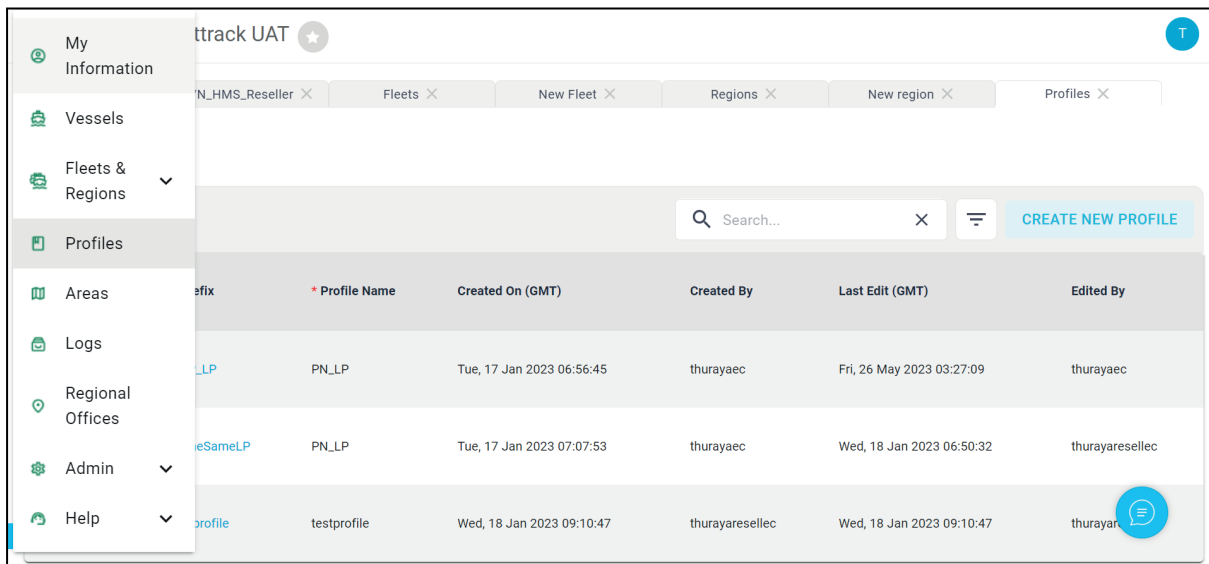


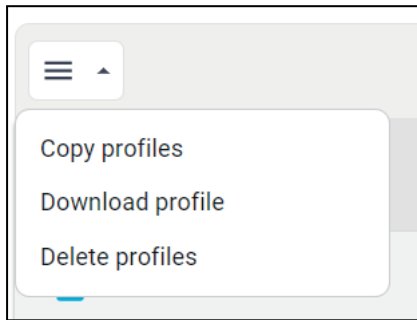 
All the profiles that are created by you will be visible under the profiles table.

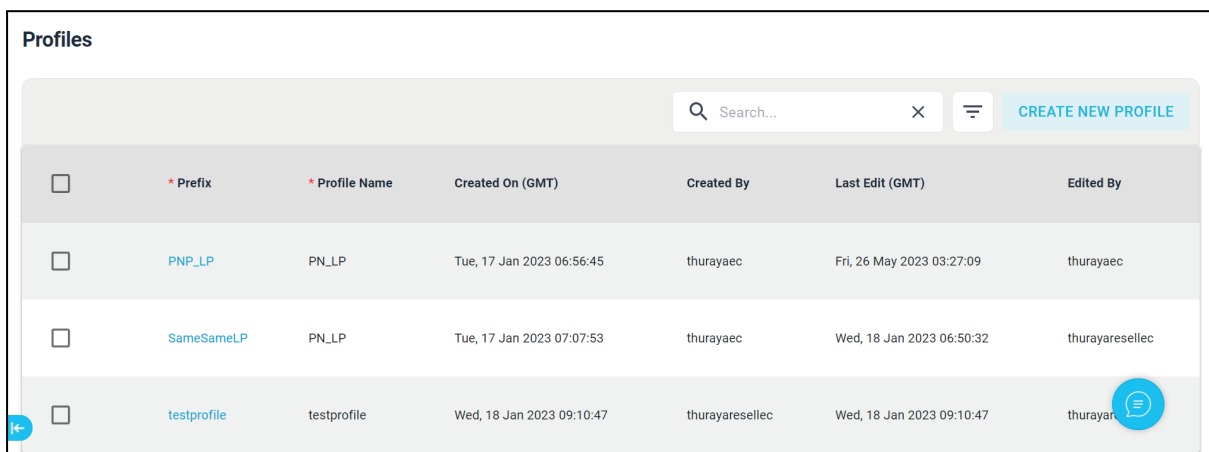

Clicking on the profile name will allow you to view the profiles.

 


The  checkbox next to each profile will enable a menu at the top of the table that will allow the user to copy profiles, download profiles and delete profiles.



8.2 Create new Profile

Clicking on the “Create New Profile” button at the top of the profile list will allow you to create a new profile.

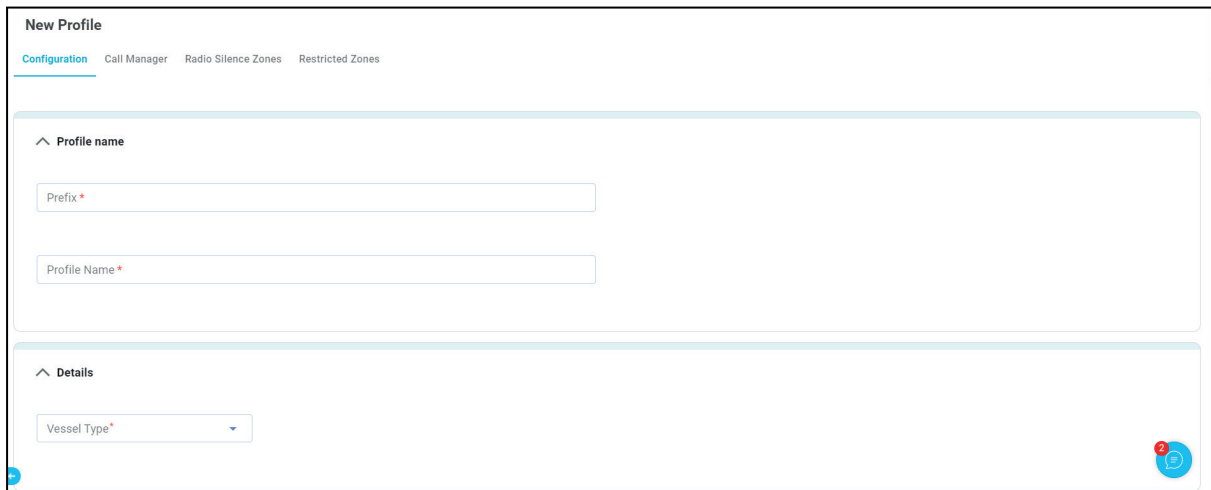

A new tab is opened to fill in the details which includes Profile prefix, Profile name, vessel type, Tracking, Alert types, SOS settings, Fish Types, Fishing gear, GPIO control & function, Crew Calling, Speed Dial, Whitelist, Blacklist, Radio Silence zones and Restricted zones and then profile is added.



User can only save the profile or save and apply the profile.

Save will only save the profile without sending out configuration commands to the selected vessels.

 
Save and Apply will save the profile and also send configuration commands to configure the vessels selected with the profile configurations.

8.2 Edit Profile

Clicking on the profile name in the profile list will allow you to view/edit the profiles.

8.3 Delete Profile

Select the checkbox next to each profile and select delete profiles from the menu. Click on the proceed button to delete the profile.

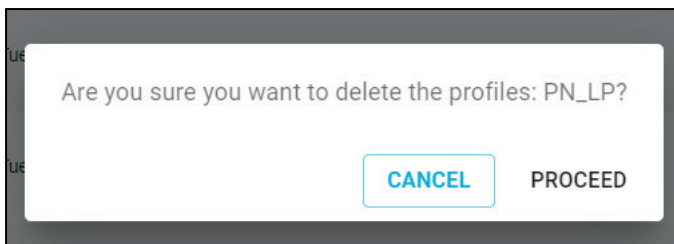

8.4 Copy Profile

Select the checkbox next to each profile and select copy profiles from the menu. Profile tab opens up with the same data as the profile selected. User can save it as is or update any data and save the profile.

8.5 Download Profile

 
Select the checkbox next to each profile and select Download profiles will download the profiles in csv file. The file will be downloaded to your computer. It will be available in the "Downloads" folder in your computer.



9. Areas

Important Note: As an End User, you will be able to view/add/update the areas.

Areas is a menu item in the top-left corner menu. Areas will have a map view. In the map view, areas are listed in the left pane and their respective locations are marked on the map when selected.

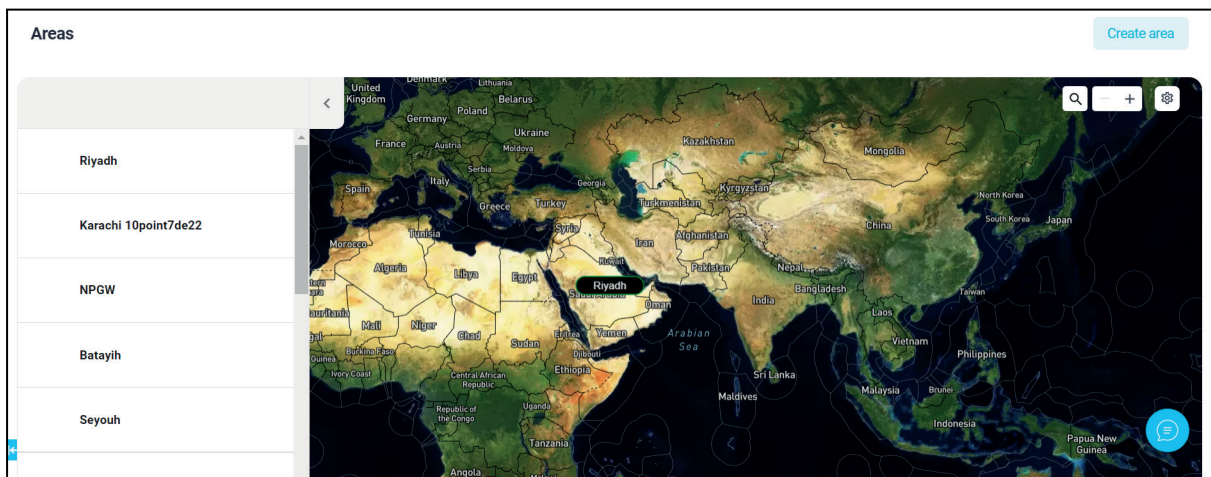

9.1 Creating an Area file for import

The file should be created and saved in csv format – the Area name can be entered while importing the file.

You can create and edit these in a spreadsheet program Microsoft Excel, or in a plain-text tool like notepad. The file should have two columns and up to 100 rows.

The first row should be the header (latitude, longitude).



Latitude in a decimal degrees format with the following prefix: (i) - to denote S (ii) no prefix for N e.g. 37.47775 09.56486 -66.43152 -05.65735	Longitude in a decimal degrees format with the following prefix: (i) - to denote W (ii) no prefix for E eg. 023.88643 126.88161 -033.98412 -003.78432
--	--

Each row represents a corner of the boundary of the area to be defined on the terminal. These should be sequentially ordered, so Point 00 is joined to point 01, point 01 to point 02 etc.

The last geo point is joined to the first geo point to draw an enclosed shape.

Important notes:

1. If you open the file in a spreadsheet software like excel, the leading zeroes will be removed (i.e. it will become 1.54675,23.52134 instead of 01.54675,023.52134), which will cause the file to error when uploading onto the portal.

You can fix this by either changing the cell to a "text" format in the spreadsheet or opening the file in a plain text tool to ensure the leading zeroes are not removed.

2. Only areas with less than or equal to 10 co-ordinates can be assigned to "Radio Silence" and "Restricted Zones".
3. Areas with more than 10 co-ordinates can be assigned to "Portal tracking areas" only.



4. UTF-8 compliant CSV files when they contain non-English characters. To display correctly, please follow below steps:
 - a. open the CSV file using Notepad.
 - b. Click "File > Save As".
 - c. In the dialog window that appears - select "ANSI" from the "Encoding" field. Then click "Save".
 - d. Open this new CSV file using Excel. Non-English characters will now appear correctly in the file.

Tips:

1. If the points are not sequentially ordered, it will error out and the area will not be loaded onto the portal.
2. The latitude should always be 2 digits (02, 25, etc) and the longitude should always be 3 digits (005, 012, 123, etc) before the decimal point.
3. If the precision for Latitude/Longitude is less than or more than 5 digits after decimal, it will error out and the area will not be loaded onto the portal.

Sample file:

```
latitude,longitude  
52.17176,-001.93881  
50.60889,-002.01022  
50.85228,001.18129  
52.31639,001.24721
```



9.2 Creating a new area

A new area can be created by

 
1. importing a csv file and storing it on the portal.
2. drawing an area on the map and storing it on the portal

This area can then be assigned to the respective slots.

9.3 To import a csv file to create a tracking area

Step 1: Click on the “Create Area” button present in the top right.

Step 2: Fill in the name (as you would want it to appear in the list) and upload the file using the “Upload Your file” button.

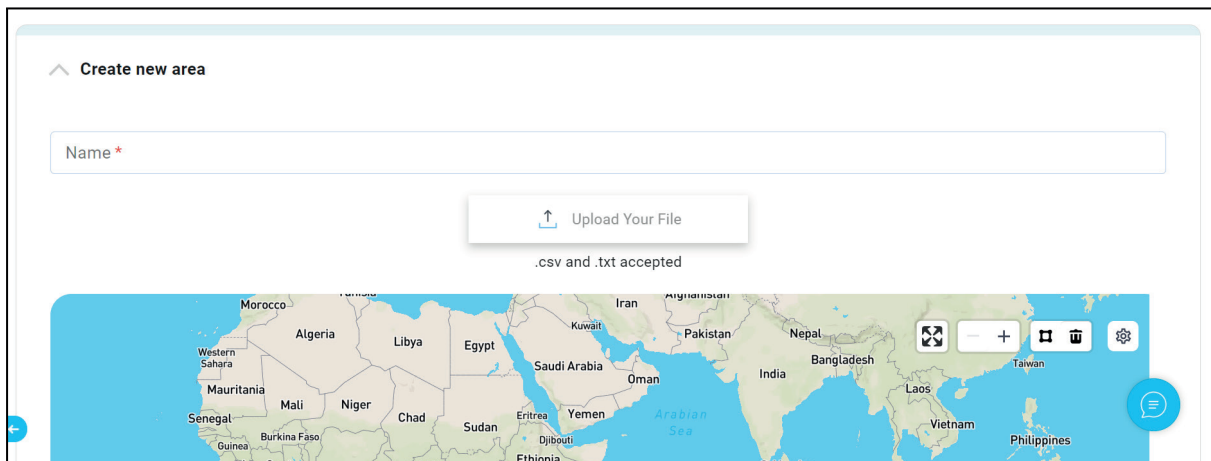

Step 3: Click on “Save” to upload the file and save it on the portal.



9.4 To draw an area on the map

Step 1: Click on the “Create Area” button on the right top

Step 2: Fill in the name (as you would want it to appear in the list)

Step 3: Click on “Polygon tool” and draw area on the map



Step 4: Click on “Save” to upload the file and save it on the portal.




10. Logs

Logs option is available under the Main menu. All the incoming and outgoing messages are being shown under 'Logs'.

The information under "Logs" include MSISDN, IMEI, Date and Time, OTA Type, OTA SubType, Direction, GPS, Speed, Area Name, In/Out and Message. If values are not available 'N/A' is displayed.

MSISDN	IMEI	Date And Time (Local Time)	Date And Time (GMT)	OTA Type	OTA Sub Type	Direction	GPS	Speed	Area Name	In/Out
2209164343650	358876104219945	Sep 6, 2023 7:36 AM	Sep 6, 2023 3:36 AM	Poll	Poll fish report	sent	N/A	N/A	N/A	N/A
2209164343650	358876104219945	Sep 6, 2023 6:26 AM	Sep 6, 2023 2:26 AM	Terminal parameter update	H/W or S/W update	received	N/A	N/A	N/A	N/A
2209164343650	358876104219945	Sep 6, 2023 6:26 AM	Sep 6, 2023 2:26 AM	Alert event	Power cycle event	received	N25.24343 E55.82927	N/A	N/A	N/A
2209164343650	358876104219945	Sep 6, 2023 6:21 AM	Sep 6, 2023 2:21 AM	Tracking	Tracking - Time	received	N23.24354 E56.82930	80Km/h	N/A	N/A
2209164343650	358876104219945	Sep 6, 2023 6:11 AM	Sep 6, 2023 2:11 AM	Response	Tracking configuration	received	N/A	N/A	N/A	N/A
2209164343650	358876104219945	Sep 6, 2023 6:10 AM	Sep 6, 2023 2:10 AM	Configuration	Tracking configuration	sent	N/A	N/A	N/A	N/A
2209164343650	358876104219945	Sep 5, 2023 12:55 PM	Sep 5, 2023 8:55 AM	Poll	Poll fish report	sent	N/A	N/A	N/A	N/A

Logs can be exported to a csv format using the  button. We can also filter the logs by Duration, Message Direction, Message Type,

MSISDN and IMEI using the filter  button.

Exporting the Logs into a csv file:

Step 1: Click on the "Export" button.

Step 2: The file will be downloaded to your computer. It will be available in the "Downloads" folder in your computer.

Tip:

1. If you are opening the downloaded csv file in excel, ensure that you are setting the format of the "MSISDN" column to text. This will ensure that the MSISDN shows up correctly.
2. To display UTF-8 compliant CSV files when they contain non-English characters correctly, please follow below steps:



- a. open the CSV file using Notepad.
- b. Click "File > Save As".
- c. In the dialog window that appears - select "ANSI" from the "Encoding" field. Then click "Save".
- d. Open this new CSV file using Excel. Non-English characters will now appear correctly in the file.

Filtering of Logs Data:

We can create our own filters by selecting the Message Direction, Message Type, MSISDN and IMEI.

Create new filter

Filter Name: 1

Messages From Date: 01-01-2023 11:24

Messages To Date: 13-01-2023 11:24

Messages Direction*: sent

Message Type*: POL

MSISDN: 8821622990398

IMEI: 358876107404759

Save as new filter

 
SAVE AND APPLY FILTER



11. Regional Offices

Important Note: As an End User, you will be able to view/add/update the Regional Offices.

Regional Offices is a menu item in the top-left corner menu. Regional Offices will have map view and table view. In the map view, regional offices are listed in the left pane and their respective locations are marked on the map. In table view, Regional Office Name, Latitude and longitude details are displayed.

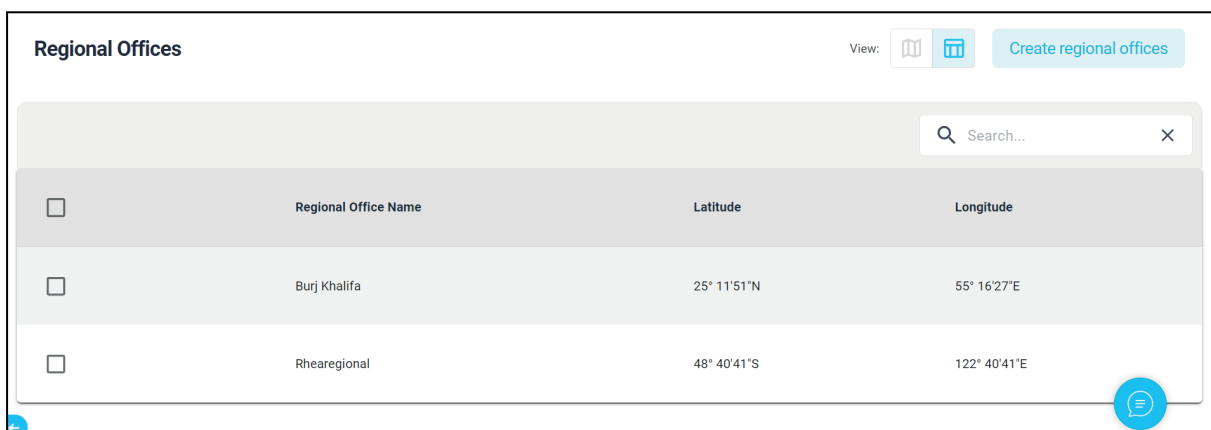



11.1 Creating Regional office file for import

The file should be created and saved in csv format. You can create and edit these in a spreadsheet program Microsoft Excel, or in a plain-text tool like notepad. The file should have three columns and up to 100 rows.

The first row should be the header (regionalOfficeName, latitude, longitude). User can enter any name in the regionalOfficeName column, latitude and longitude of the regional office in the second and third column respectively.

Latitude in a decimal degrees format with the following prefix:	Longitude in a decimal degrees format with the following prefix:
(i) - to denote S	(i) - to denote W
(ii) no prefix for N	(ii) no prefix for E
e.g.	eg.
37.47775	023.88643
09.56486	126.88161
-66.43152	-033.98412
-05.65735	-003.78432

Important notes:

1. If you open the file in a spreadsheet software like excel, the leading zeroes will be removed (i.e. it will become 1.54675,23.52134 instead of 01.54675,023.52134), which will cause the file to error when uploading onto the portal. You can fix this by either changing the cell to a "text" format in the spreadsheet or opening the file in a plain text tool to ensure the leading zeroes are not removed.



2. UTF-8 compliant CSV files when they contain non-English characters. To display correctly, please follow below steps:
 - a. open the CSV file using Notepad.
 - b. Click "File > Save As".
 - c. In the dialog window that appears - select "ANSI" from the "Encoding" field. Then click "Save".
 - d. Open this new CSV file using Excel. Non-English characters will now appear correctly in the file.

Tips:

1. The latitude should always be 2 digits (02, 25, etc) and the longitude should always be 3 digits (005, 012, 123, etc) before the decimal point.
2. If the precision for Latitude/Longitude is less than or more than 5 digits after decimal, it will error out and the area will not be loaded onto the portal.

Sample file:

```
regionalOfficeName,latitude,longitude  
regOfcName1,27.67855,-112.67856  
regOfcName2,50.60889,-002.01022  
regOfcName3,50.85228,001.18129  
regOfcName4,52.31639,001.24721
```

 
11.2 Creating a Regional Office

A new Regional Office can be created by importing a csv file and storing it on the portal.



11.3 To import a csv file to create a Regional Office

Step 1: upload the Regional Office csv file using the “Upload Your file” button.

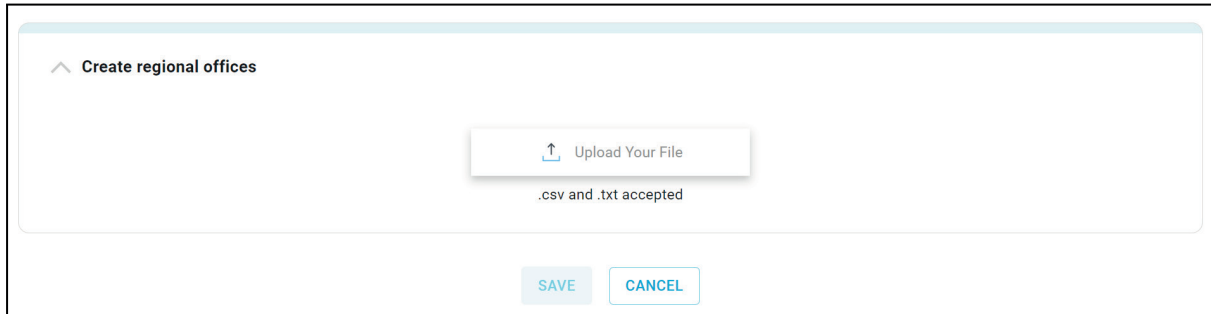

Step 2: Click on “Save” to upload the file and save it on the portal.

12. Admin

12.1 Admin Settings

Admin settings include report frequency and metrics settings.

12.1.2 Report Frequency

Important Note: As an End User, (based on the permissions provided to you by the Level 1 user) you will be able to update the Report Frequency.

Admin settings

[Report frequency](#) [Metrics](#)

Report Frequency

* Select Area	* Frequency In Minutes	Active MSISDNs
4 point area	20	
6 points	60	
Bhutan3ptMay22	100	
area1	20	
areaa1	60	
India	30	220916121460
Indiaarea	75	
londonarea	20	8821622990398



When a vessel enters any of the areas - the value configured as “Frequency” corresponding to the entered area will be assigned to “Tracking By Time - Interval” and configured on the terminal.

When the vessel exits the area, the “Tracking by time - Interval” will revert to the previous value.

12.1.2 Metrics

User can update the metrics configuration in this menu. Below are the metrics available:

1. Speed - options are “Kilometre/hour“ and “Knots”
2. Weight - options are “Kilogram” and “Pounds”
3. Temperature - options are "Celsius" and "Fahrenheit"
4. Distance - options are "Kilometre" and "Miles"
5. Height - options are "Metres" and "Feet"

When the user chooses a metric here and clicks on save, all the values on the portal will be updated to reflect values in the selected metric.

12.1.3 Notifications

Notifications allows the user to send notifications to the selected user roles when any SOS comes in.

^ Email preferences

- Email SOS Notifications To End Users (All Levels)
- Email SOS Notifications To Resellers/Regulators (All Levels)
- Email SOS Notifications To Service Partners
- Email SOS Notifications To Customer Care

SAVE

 
Selecting the users you want to notify and clicking on “Save” will send notifications to the selected users whenever an SOS comes in from any of the vessels for this user.




12.2 Create Users

Important Note: As an End User, you will be able to create users only if you are a Level 1 user. As a level 2 or level 3 End user, you will not see this menu.

Create Users is a Sub menu item under the Admin menu in the top-left corner menu.

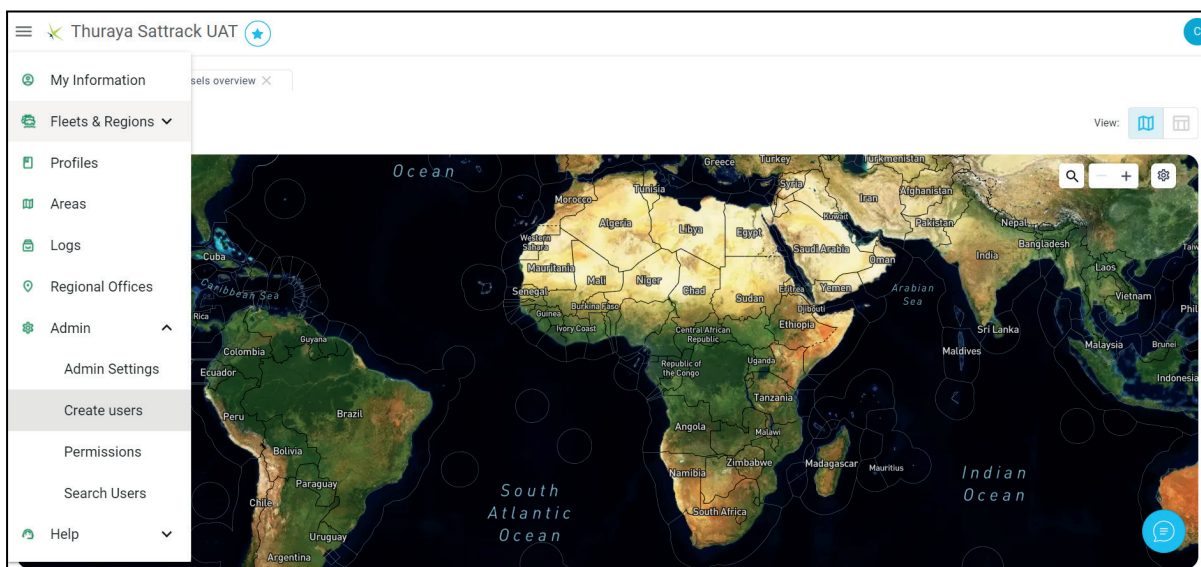


 12.2.1 Add New User



Clicking on this **New user** button at the bottom of the Users list will allow you to create a new level 2 & level 3 user.

 A new row is added to the table. Fill in the details into the new row.




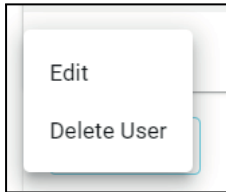 
Click on the  button to save the user.


The newly created user will receive an email with their credentials.



12.2.2 Edit User

 
Click on the menu  beside the user created & click edit option.



User can update primary fleet and Level & Click on the  button to save the details of the user.


12.2.3 Delete User

Click on the menu  beside the user created & Select Delete User

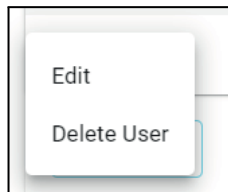

option.

 Click on Confirm to delete the user.

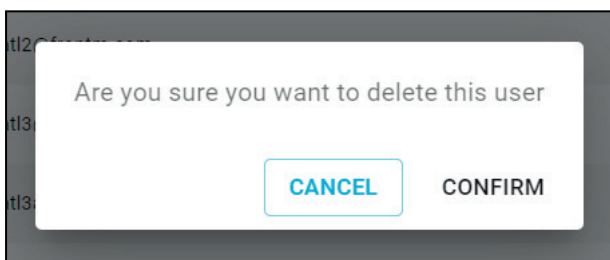


12.3 User Permissions

Important Note: As an End User, you will be able to access this menu only if you are a Level 1 user. As a level 2 or level End user, you will not see this menu.


This allows the End User Level 1 User to provide/revoke permissions to Level 2 and Level 3 End User Users.



 Select the user type for which you want to view/edit permissions.

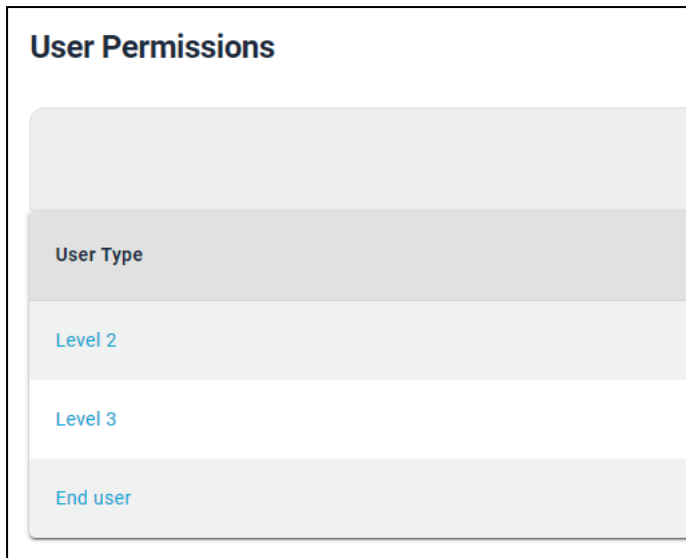

 Select the features to provide access & select the access (Hidden, Read or Write). Access for the selected user type will be updated.

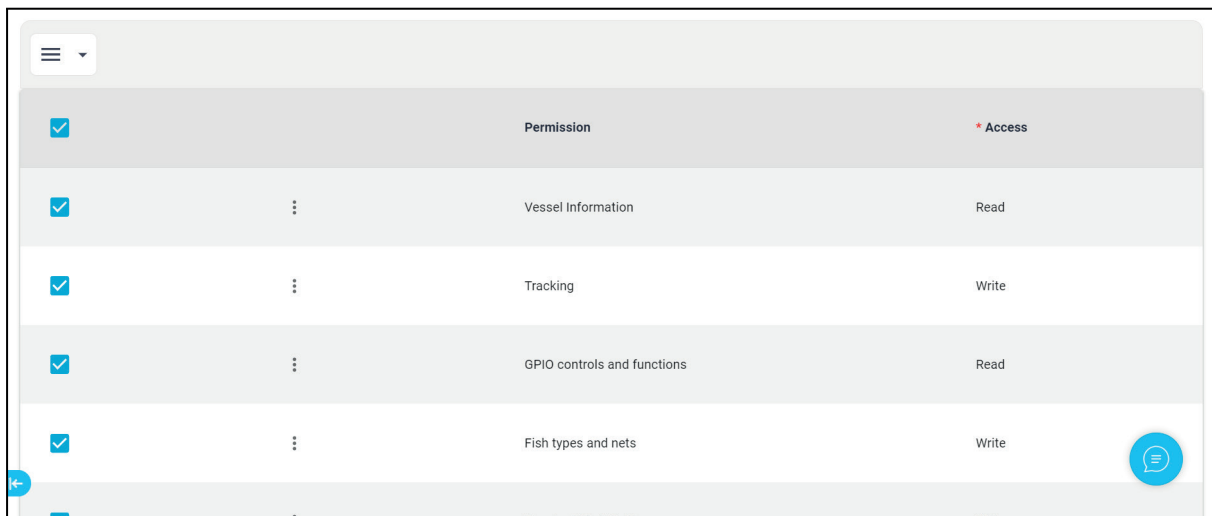

12.4 Search Users

Search users tab list all the users under your hierarchy. Search Users include Service Partner, Reseller/Advanced profile users, End Customer, User Name, User Email ID, Role and license key information of all the users.



User can search by License key and Customer Name.

<input type="checkbox"/>	Service Partner	Reseller/Regulator	End Customer	User Name	User Email ID	Role	License Key
<input type="checkbox"/>	SP - Thuraya UAT	Thuraya UAT Reseller	End Customer - UAT 1	thurayaec	bhavya+thurayaec@frontm.com	End Customer - Level 1	eQftGZaQ8U
<input type="checkbox"/>	SP - Thuraya UAT	Thuraya UAT Reseller	End Customer - UAT 1	thurayaresellec	bhavya+thurayaresellec@frontm.com	End Customer - Level 1	eQftGZaQ8U
<input type="checkbox"/>	SP - Thuraya UAT	Thuraya UAT Reseller	End Customer - UAT 1	Angie	angie@jolie.com	End Customer - Level 2	eQftGZaQ8U
<input type="checkbox"/>	SP - Thuraya UAT	Thuraya UAT Reseller	End Customer - UAT 1	thurayaresl2a	bhavya+thurayaresl2a@frontm.com	End Customer - Level 2	eQftGZaQ8U
<input type="checkbox"/>	SP - Thuraya UAT	Thuraya UAT Reseller	End Customer - UAT 1	thurayaresl3	bhavya+thurayaresl3@frontm.com	End Customer - Level 3	eQftGZaQ8U

Filtering of Users:

We can create our own filters by filling in SP/Reseller/Regulator/End customer name, Role, Username, License key details.

Search Users X

Create new filter

Filter Name

SP/Reseller/Regulator/End Customer Name

Role

User Name / User Email ID

License Key



13. Help (on portal)

There is a help menu available on the portal. On clicking the menu at the top left, a “Help” menu is available. This menu has the following sub menus:

FAQ’s & Support: Clicking on FAQ’s menu will open a new tab with following subtabs -

1. Frequently Asked Questions: This tab includes a series of questions that are commonly asked by customers.
2. Support: Thuraya Customer Care details.

Download End User Manual: Clicking on Download End User Manual will download this End user manual. The file will be downloaded to your computer. It will be available in the “Downloads” folder in your computer.

14. Permissions

You will have the permissions to remotely program or retrieve some data from the terminal (notifications and request for information from the portal to the terminal, reporting from the terminal to the portal and configuring the terminal) based on the table below.

You will, however, be able to view all the data even where you do not have the permission to retrieve or configure it.

For more detailed access levels provided as a default, refer to [Standard profile End User Permissions](#)

Important Note: If you request to change the Captain password, your request will be routed to the immediate next level for approval.